

USER'S MANUAL DD965BNC

BLUETOOTH® • 320 WATTS • BUILT-IN NAVIGATION DOUBLE-DIN DVD/MP3/CD AM/FM RECEIVER

FEATURING 6.5" (165mm) WIDESCREEN TOUCHSCREEN DIGITAL TFT LCD MONITOR **PLUS** REAR-VIEW LICENSE PLATE MOUNT CAMERA



































To ensure safety while driving

and to comply withlaws,

drivers should not watch video or

operate the video device while driving.

INSTRUCTIONS

CONTENTS	
General information	1
Safety notice	2
Accessories	3
Remote control operation	4
Unit Installation	6
Wires Connection Description	
Panel introduction	8
Main menu operation instruction	9
Access setup interface	11
General setup	11
Disc setup	12
Audio setup	12
Navigation setup	13
Other setup	14
Swc-steering Wheel Control Setting	14
Radio Operation	15
Media Playing—video/disc Form Playing	17
Media Playing—audio/disc Form Playin	18
Music Playing Menu	19
BT operation	19
Bluetooth operation menu	19
Bluetooth dialing	20
Bluetooth call	21
Bluetooth phone book	21
Bluetooth phone call history	22
Bluetooth Music-a2dp	23
Picture	23
Camera/Aux/Av meun	
Trouble shooting	26

GENERAL INFORMATION

Model No.	DD965BNC				
General features	DVD ±R/RW Audio & Video CD ±R/RW Audio & Video FM/AM Tuner (Switchable Tuner) USB Port SD Port (64GB Max) USB Charging (1A) A/V In/Out Rear Camera Input Front, Rear, Sub Pre-Amp Outputs Steering Wheel Control Input				
TFT screen	6.5 TFT (800 x 480 Resolution)				
SD	64G				
Working power	11-16 V DC Allowable, Negative Ground				
Max Output	4 x 80 Watts				
Working Temperature -20°C~70°C					
Size	96.5*170.5*144mm				
Weight	About 1.92kg				
Compatible Formats					
Picture/Audio formats JPEG, BMP, PNG, MP3,AAC,WAV					
Disc	CD/CD-R/CD-RW/DVD/DVD-R/DVD+R/ DVD-RW/DVD+RW				
	.AVI	MPEG/AC-3 MPEG/AAC	MPEG-4 AVC	O X	
Video file	MP4	MPEG/AAC	MPEG-4 Visual	0	·
NOTE:	. 45.6	MPEG/AC-3	AVC MPEG-1/2	X O	
O-YES	MPG	AAC	AVC	Х	
X-NO	RM	Cooker	RealVideo1	Х	
		Cooker	RealVideo3	0	
	RMVB	Cooker	RealVideo3	0	

Please read and understand the following safety information before operating this unit.

- The device is suitable for 12V power supply (requires grounding).
 Do not connect it to 24V power supply in trucks or buses, or else it will be damaged.
- Please use genuine discs, instead of incompatible and poor discs, or else it will damage the device or shorten the service life.
- Without the guide of qualified personnel, do not replace the fuse, or else it may damage the device or cause fire.
- ⚠ Please follow the traffic laws and regulations and do not watch program or operate the device when you are driving, to avoid accidents (excluding passengers watching through rear monitor).
- To ensure safety and operate the device normally, please ask qualified personnel to install the device. do not disassemble or repair the device without authorization, to avoid damage and accidents. Please contact local car audio distributor for details.
- O Do not put the device in moist environment or water, to avoid electric shock, damage and fire due to short circuit.
- ♦ The mechanical drive part of the monitor uses automatic precision transmission component. Do not pull, push or rotate the device by force or impact the TFT screen to avoid damaging the device.
- Do not insert the audio plug of the vehicle into the master unit directly, please convert with the dedicated end cable provided by our company.
- When install the unit, prevent metal objects falling into the master unit from the vents to avoid short circuit and damaging the device.

Safety Statement


- ♦ For the safety of you and others, do not watch programs or operate the device when you are driving. It is prohibited by the laws and regulations.
- The backing monitor function should be used as auxiliary means. we are not responsible for any accidents occurred during backing.

ACCESSORIES

Please note that when you buy this unit, you can find all the following parts in the gift box. And if not, please don't hesitate to contact us to get any of it.



REMOTE CONTROL OPERATION

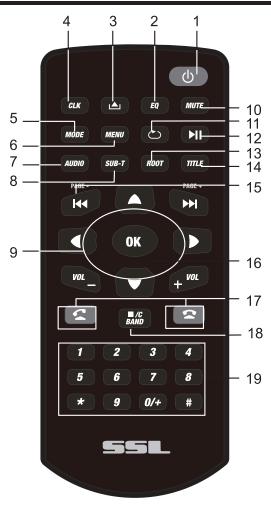

1.TURN ON/OFF

Press to turn on or turn off the unit.

2.EQ mode

Press to set EQ mode.

3.EJECT Key

Press to eject the Disc in the unit. And press again to load the Disc if you do not take out it.

4.CLK key

Press to show CLK, and press again back the last source. No working when video is playing.

5.MODE key

Press to change mode of the unit.

REMOTE CONTROL OPERATION

6.MENU key

Press menu key to turn back to the main interface of the unit under any mode.

7.Audio KEY

Press to change switch language in DVD mode, and switch left, right or stereo in VCD mode.

8.SUBTITLE Changing Key Switch the subtitle during playing if the Disc have multiple subtitle.

9.Direction and OK key

If there is a Disc with root list menu, press direction key to move up/down/left/right, and press OK to confirm.

10.MUTE key

Press to mute the unit and press again to restore the volume.

11.REPEAT key

Under DISC/Music/Video mode, press to set the repeat mode.

12.Play/Pause

Press to switch play pause.

13.ROOT key

DVD playing mode, press to go into root list menu; VCD playing mode, press to turn on/off PBC function.

14.TITLE key

Under DVD playing mode, press to enter into title list menu.

15.Under Disc/music/video mode, press to choose previous/next song.

Under music list menu, press to choose PRE/NEXT music. Under RADIO mode, press to search frequency forward/backward.

16.VOLUME UP/DOWN key

Press to adjust volume up and volume down.


17.Receiving calls/call out; hang up.

18.STOP/C/BAND

In disc playing mode, press to STOP, press "ok" to start; In radio mode press to change band between FM1/FM2/FM3/AM1/AM2; Press to enter RADIO mode, except DVD mode. Delet wrong number when in phone mode.

19. Number key


Enter phone number in phone mode.

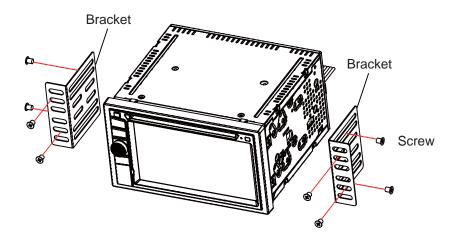

- 1. Put the 2 brackets to the left and right side of the unit;
- 2.Use screws to fix the brackets to the unit.
- 3. Once the screws are attached, the brackets can be adjusted forward or aft depending on the installation requirements.


WIRES CONNECTION DESCRIPTION


The Description of the Input/Output Interface

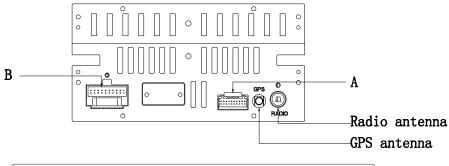

YELLOW. (B+)12V RED. ACC(+12V) LT.GREEN. PARKING BRAKE VIOLET/WHITE. REVERSE BLUE. ANT. CONT BLACK. GROUND BLUE/WHITE. P. CONT WHITE. LEFT FRONT(+)	GREEN/BLACKLEFT REAR(-) GREYRIGHT FRONT(+) GREY/BLACKRIGHT FRONT(-) VIOLETRIGHT REAR(+) VIOLET/BLACKRIGHT REAR(-) STEERING WHEEL CONTROL WHITEKEY A
WHITE/BLACKLEFT FRONT(-) GREENLEFT REAR(+)	BROWNKEY B BLACKKEY GND

Description of the Wiring Diagram for Socket A

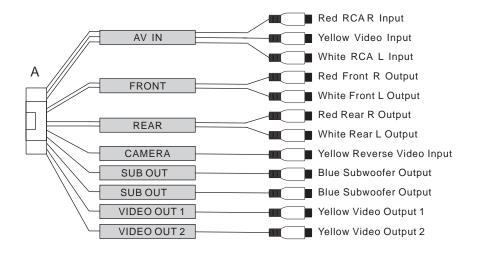

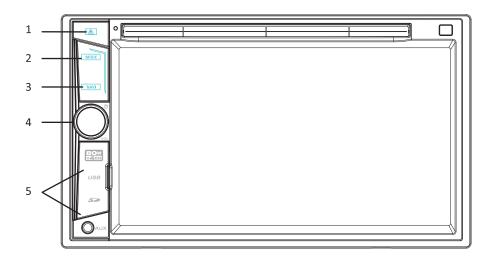

1.Eject key

When there is a Disc in the unit, press EJECT to remove the Disc. And press again to load the Disc if you do not take out it.

2.MODE key

Press to select system mode (RADIO/DISC/PHONE/VIDEOS/MUSIC/PICTURES/AUX IN/AV INPUT/CAMERA/NAVI)

3.NAVI key

Press to enter into GPS function, or back media from GPS.


4.TURN ON/OFF & VOLUNE UP/DOWN

Long touch to turn ON/OFF the unit. Short touch to activate the MUTE function and silence the audio output. Touch again to restore sound. Rotate to adjust the output volume UP or DOWN.


5.Open to see GPS card slot, AUX IN jack, SD slot, USB port and reset key.

MAIN MENU OPERATION INSTRUCTION


MAIN MENU 1

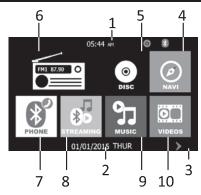

- 1. Shows the present time of the unit.
- 2. Shows the present date and week .
- 3. Touch to choose between main menu 1 and main menu 2.
- 4. NAVI: Navigation Interface

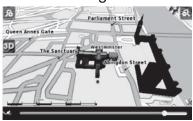

 5. Disc Interface



6. Radio Interface



7. Phone setup Interface



8. BT Music Interface




9. Music Interface



MAIN MENU OPERATION INSTRUCTION


MAIN MENU 2

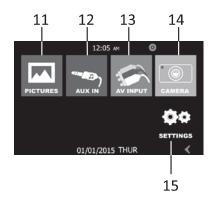

10. Video Interface



12. AUX Interface

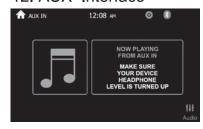

14. Camera Interface



11. Picture Interface



13. AV no signal Interface






ACCESS SETUP INTERFACE

There are five menu in setup:

GENERAL SETUP—Menu 1

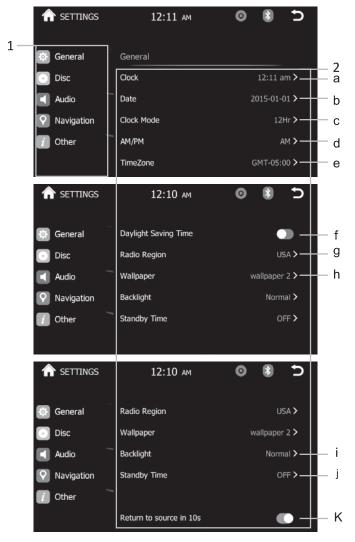

- 1.Setup function area: General setup, Disc setup, Audio setup, Navigation setup, Other setup.
- 2. Subsidiary function area: Move up and down to see the general setup items.
 - a. Touch to setup the present time.
 - b.Touch to set present date


ACCESS SETUP INTERFACE

- i.Backlight dimmer selection: Night/Dark/Normal/Bright.
- j.Go sleep time selection: OFF/One minute/Five minute/Ten minute.
- k. Turn it ON, it will go back from main menu to the latest playing mode in 10 seconds if you do not operate.

NOTE:


Move up and you will see some other setup subsidiary functions.

DISC SETUP - Menu 2

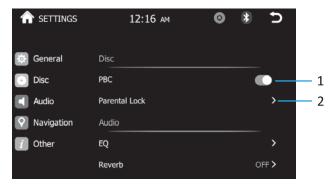



- 1. Touch to turn on or turn off the VCD PBC function.
- 2. Touch to set up the level of the DVD. Default password is 000000.

AUDIO SETUP - Menu 3

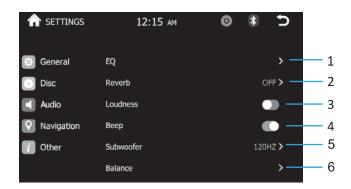


ACCESS SETUP INTERFACE

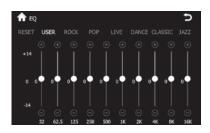

 

- 1.Press to enter into EQ set up menu.
- 2.Reverb selection: OFF/Livingroom/Hall/Concert/Cave /Bathroom /Arenal.
- 3.Loudness: ON/OFF. 4.Beep sound: ON/OFF.
- 5. Subwoofer selection: OFF/80HZ/120HZ/160HZ.
- 6.Balance: You can adjust the speaker volume by adjusting the front and back, left and right column.

NAVIGATION SETUP - Menu 4

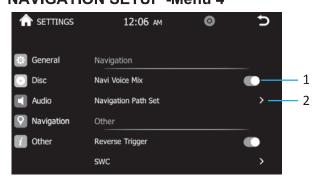

1.Turn on or turn off the navigation voice mix function. Turn on, once report navigation information and also have audio source play. Turn off, there is only navigation voice.


2. Press to go into navigation path setup menu:



It will show the usable navigation program and choose to set as the running program.

SWC-STEERING WHEEL CONTROL SETTING

OTHER SETUP - Menu 5

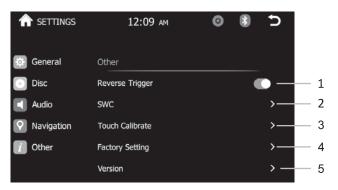

- 1.Reverse trigger: Turn on if you have a rear view camera. Turn off if you havn't.
- 2. Touch to enter swc menu.
- 3. Touch to enter calibrate menu.
- 4.Load factory setting.
- 5. Touch to see the saftware version of the unit.

SWC-STEERING WHEEL CONTROL SETTING

Touch SWC enter SWC setting menu:

Press"OK"to start SWC learning.

Start learning:

Set the POWER button as an example.

- 1.Press POWER button in the unit(Picture 1) ,then you will see reminder like picture 2, Press OK.
- 2.Press POWER key in your steering wheel. Then you can see the reminder in the unit like Picture .Setting successfully. Will show like Picture 3.
- 3.Click OK, and finished learning.
- 4. Repeat 1-3 to learning other keys.

Picture 1



Picture 2




RADIO OPERATION

Picture 3



SWC1: Select different SWC resistance to meet different cars. If you cannot finish all key pairing, you can press to select SWC2 SWC3, until all keys can learn. NOTE: Click SWC1 you will lost all KEY learning before.

RADIO OPERATION

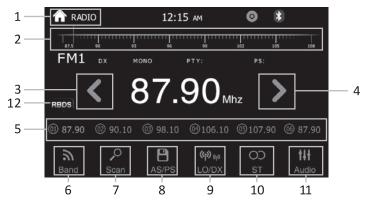

- 1.Show the present mode. Touch to go back home.
- 2.Click to choose the frequency.
- 3. Short press to seek backward. Long press to enter manual mode and backward in step.
- 4. Short press to seek forward. Long press to enter manual mode and forward in step.
- 5. Preset stations area, long press to save current station.
- 6.Band changing:Click to change band between
- FM1/FM2/FM3/AM1/AM2.
- 7. Search the stations, play the searched one for 5S and go on to search next one and repeat this.
- 8. Change betwech AS and PS.
- 9.LO/DX: Touch to select Local or Distant broadcasting stations.
- 10.Stereo on/off:Click to turn on/off stereo when receiving a stereo signal.
- 11.EQ: Press to set the audio effect.

12. RBDS: Touch to enter RBDS setup menu. you can choose the program type you like to listen: news, sports ,inform, etc.



a. TA(Receive traffic information)

ON: When the taffic station is turned on, the radio will automatically search for traffic stations. After a staton is searched, screen displays "TP" Only when traffic information is broadcasted can it be received, after traffic information is completed, the radio will automatically switch to the previous mode.

OFF: Repress [TA] button to close TA function. In other modes, traffic announcement will automatically switch to radio mode, after the traffic announcement is completed, it will automatically switch to the previous mode.

b. AF

Touch the button to turn the AF function on/off. AF function is turned on, When the received station signals become weak, the radio will automatically fine-tune to other frequencies. When receiving an emergency announcing, the screen will display warning message.

c.CT (clock time)

To provide current time correction information, the RBDS station can automatically correct the system clock of the receiver when the clock RBDS is opened.

d. PTY

Touch the button the screen displays program types, users can search station according to program type.


Note: If the unit does not have RBDS function, it has no AF/TA/PTY function.

MEDIA PLAYING—VIDEO/DISC FORM PLAYING



- 1. o lcon gray mean no disc loaded, orange mean disc loaded.
- 2.Function Area: show the process and time of the present video. This bar will disappear in a while, and click this area to show this function bar again. Touch the bar to set the playing time.
- 3. Click to show the information of present video.
- 4. Function bar same as audio playing menu.

Press the function key and you will see the following to choose chapter:

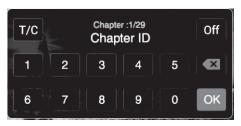

Click the relevant key to choose the chapter

 
NOTE: When properly installed, DVD video cannot be displayed unless the parking brake is applied. If you attempt to play a DVD while the vehicle is moving, the screen displays the following warning.




MEDIA PLAYING—AUDIO/DISC FORM PLAYIN



- 1. Total time of the playing song.
- 2.ID3 information of the music playing such as singer's name, music style, music name etc.
- 3. Present playing one/total music numbers.
- 4.Random play.
- 5.Loop playback.(ALL/SINGLE loop play).
- 6.PREV: Press to choose previous music.
- 7.PLAY/PAUSE: Touch to begin playing. And press the icon again to pause playing.
- 8.NEXT ONE: Press to choose next music.
- 9.Click to see the music play list menu. And user's can choose which one to play here.



10. Press to going into EQ setting interface:

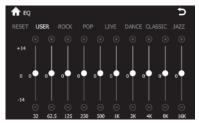

MUSIC PLAYING MENU

Press MUSIC in the main menu, it refers to the music file from SD

and USB.



BLUETOOTH OPERATION MENU

Click phone icon and will enter into Bluetooth function interface:



- 1.Function area:
- a.Click and see the dialing keypad, users can dial no. and make phone calls
- b.Click to see the Bluetooth phonebook menu.
- c.Click to see the Bluetooth call history.
- d.Bluetooth pairing interface as following:



e.Bluetooth setting menu.

- 2.Bluetooth setting menu:
- a.ON/OFF: Turn on and turn off of Bluetooth when not using.
- Turn on:show gray BT 👔 . and the icon turn blue when paired phone.
- b.Anser automatically: Can turn on or turn off the function of listen to calls automatically.
- c.Connect automatically: Can connect the devices automatically which have already been connected before .
- d.Default Bluetooth name for this unit: SSL DD965BNC
- e.PIN code: Default password"0000", and can be change by yourself click"0000"

BLUETOOTH DIALING



- 1.Shows the number you press in, and press to delete wrong number.
- 2.Key area.
- 3. Touch to call out.

BLUETOOTH CALL



- 1.Press to hang up the phone call.
- 2. Touch to talk through Bluetooth.
- 3. Touch to talk through cellphone.
- 4. Touch to mute mic
- 5. Touch to get keypad.
- 6.Show contact name.

BLUETOOTH PHONE BOOK




1. Touch to enter name and search the wanted phone number.



- 2.Click to sync phonebook.
- 3.Contact list.

BLUETOOTH PHONE CALL HISTORY

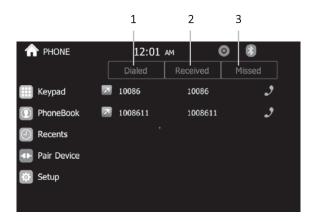


- 1. Touch to show the dialed phone number.
- 2. Touch to show the received phone number.
- 3. Touch to show missed calls.

BLUETOOTH MUSIC-A2DP



- 1. Show playing song name and ID3
- 2 Previous song
- 3.Play/pause.
- 4.Next sony
- 5.Enter EQ setting menu.

PICTUER

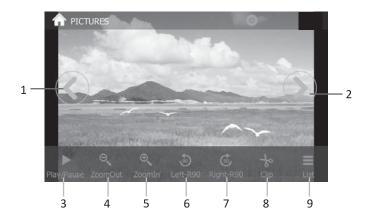


- 1. Press to turn to the previous picture.
- 2. Press to turn to the next picture.
- 3.PLAY/PAUSE: touch to begin play. Press again the icon to pause.

During picture playing mode, one picture will be played for 5s automatically and goes to the next if you do not press it.

- 4.Zoom in the present picture.
- 5.Zoom out the present picture.
- 6.Turn left 90 degrees.
- 7. Turn right 90 degrees.
- 8.Press to tailor the picture as you want. Touch and drag the corner to decide the picture and press ,you can set the picture as the background of the unit. And this background will remain the same till you reset it.




9.Press to see the picture list:

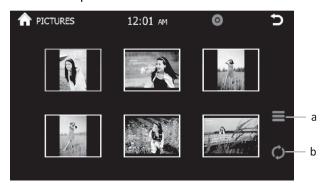

a.Touch to change between picture mode and picture list mode. b.Scan the picture file of your SD or USB.

CAMERA/AUX/AV MENU

CAMERA: Rear view function, the rear view video signal can display automatically when you reversing the car, and back to the last sources after reversing the car.

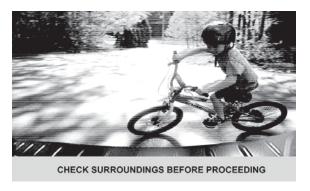

AUX IN: External audio input function Connect the audio device to the unit by the 3.5mm jack in front of the panel and touch AUX INPUT icon.

AV INPUT: External video and audio input function Connect the video and audio device to the unit by the RCA jacks and touch AV INPUT icon.





TROUBLE SHOOTING

Table 1: Error message

Media displayed	Cause	Corrective Action
Loading	Disc is being read	
No Disc/Bad Disc	Disc is dirty	Clean the disc
	Disc is upside down	Insert Disc in right way
Unknown Disc	Unsupported Disc type	Check the disc and change one
Error	Illegal mechanism operation	Press EJECT for 5s to reset loading mechanism

Table 2:General problems

Problem	Cause	Corrective Action	
Unit will not	Radio fuse blown	Install new fuse with right	
power on		rating	
	Car battery fuse blown	Install new fuse with right rating	
	Illegal operation	Press the RESET button	
Screen touch	Place of touch screen	Go to setup menu and set the calibration	
is insensitive	is offset		
No audio output	Improper audio output connection	Check wiring and correct	
	VOLUME 0	Turn up the volume	
	Improper MUTE connection	Check wiring and TEL MUTE connection	
	Speaker damaged	Change speakers	
Low audio output	Volume set too low	Increase the volume	
	Heavily biased volume balance	Check and adjust the channel balance to the center position	

TROUBLE SHOOTING

Poor sound quality or distortion	Speaker power rating not compatible with unit	Connect proper speakers
	Speaker is shorted	Check speaker contrast
No GPS image	Image has not been changed to GPS system	Change to GPS system

Table 3: TFT monitors

Problem	Cause	Corrective Action
No image	Incorrect connection	Check wiring and
	to parking wire	correct
	Parking brake is not	Stop vehicle in safe place
	engaged	and set parking brake ON
Flashing image	DVD is not compatible with	Change setup to
or interference	current TV system settings	accommodate Disc
appears on screen		
	Improper video signal connections	Check wiring and correct
Improper image,	Improper aspect ratio setup	Use correct aspect
improper height/width		ratio setting
ratio display		

Table 4: Tuner

Problem	Cause	Corrective Action
Weak station searching	Auto antenna is not fully extended	Connect the auto antenna properly
	LOCAL function is activated	Turn LOCAL function OFF

TROUBLE SHOOTING

Table 5: Disc

Problem	Cause	Corrective Action
Cannot insert Disc	Disc already inside unit	Eject the current Disc and insert the new one
Lots of noise during		Use a new one in good
play, and stop then	warped	condition
	Disc is dirty or wet	Clean the Disc
No repeat or	PBC is ON	Turn PBC OFF
searching while		
playing VCD		



SOUND STORM LABORATORIES

3451 Lunar Court, Oxnard CA 93030

TECHNICAL ASSISTANCE

www.soundstormlab.com/customer-support/ 1-888-387-8676 US Toll-free 1-805-983-8008 US Local Main

DD965BNC

BLUETOOTH® • 320 WATTS • BUILT-IN NAVIGATION DOUBLE-DIN DVD/MP3/CD AM/FM RECEIVER







iPod° and iPhone° are registered trademarks of Apple Inc. in the U.S. and other countries.

Sound Storm Laboratories is not affiliated with Apple Inc.

The Bluetooth° word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sound Storm Laboratories is under license. Other trademarks and trade names are those of their respective owners.