




EV3K_{MINI} EV4.2K_{MINI}

Congratulations on your purchase of a  Class D Amplifier.

It has been designed, engineered and manufactured to bring you the highest level of performance and quality, and will afford you years of listening pleasure.

Thank you for making  your choice for car audio entertainment!

USER'S MANUAL

page	CONTENTS
2	Introduction
2	Features
3	What is included?
3	General precautions
3	Installation precautions
3	Mounting the amplifier
4	Connecting the amplifier
5	Important system considerations
5	Tips for a safe system
6	Low level input wiring
7	High level input wiring
8	Speaker wiring
11	Power connections <i>Normal and with Stiffening Capacitor</i>
13	Troubleshooting
14	Specifications

Specifications

MODEL	CLASS D MonoBlock Car Audio Amplifier	CLASS D 4 Channel Car Audio Amplifier
	EV3K _{MINI}	EV4.2K _{MINI}
RMS POWER into 4 Ohms	1500W x 1	200W x 4
RMS POWER into 2 Ohms	2100W x 1	n/a
MAX POWER into 2 Ohms	3000W x 1	500W x 4
MAX BRIDGED POWER into 4 Ohms	n/a	1000W x 2
Min. speaker impedance	2 Ohm Mono	
Input impedance	10k Ohm	
Frequency response	10Hz-1KHz	9Hz-50kHz
Signal-to-noise ratio	105dB	105dB
Crossover/filter range		
low pass	30Hz-1kHz	50Hz-500Hz
high pass	n/a	50Hz-500Hz
subsonic	10Hz-45Hz	n/a
Bass Boost	Variable 0 --+18dB	Variable 0 --+12dB
Treble Boost	n/a	Variable 0 --+12dB
Phase Shift	Variable 0-180°	n/a
Fuse rating	40A	40A
Dimensions:	8-3/4" x 5-1/8" x 1-3/4" (221x130x45mm)	9-3/32" x 5-1/8" x 1-3/4" (231x130x45mm)

*All specifications subject to
change without notice.*

Troubleshooting


If you experience operation or performance problems with this product, compare your installation with the electrical wiring diagram on the previous pages. If problems persist, read the following troubleshooting tips which may help eliminate the problems.

SYMPTOM

POSSIBLE REMEDY

Amplifier will not power up.	<i>Check to make sure you have a good ground connection. Check that the Remote Input (Turn-On) has at least 3VDC. Check that there is battery power on the (+) terminal. Check that there is at least 12v. Check all fuses, replace if necessary. Make sure that the Protection LED is not illuminated. If it is lit, shut off the amplifier briefly, and then repower it.</i>
Protection LED comes on when amplifier is powered up.	<i>Check for short circuits on speaker leads. Turn down the volume control on the head unit to prevent overdriving. Remove speaker leads, and reset the amplifier. If the Protection LED still comes on, then the amplifier is faulty and needs servicing.</i>
No output.	<i>Check that all fuses are OK. Check that amplifier is properly grounded. Check that the Remote Input (Turn-On) has at least 3VDC. Check that the RCA audio cables are plugged into the proper inputs. Check all speaker wiring.</i>
Low output.	<i>Reset the Level Control. Check the Crossover Control settings.</i>
Audio present in only one channel.	<i>Check the RCA interconnect cables. Check all speaker wiring.</i>
High hiss in the speakers.	<i>Disconnect all RCA inputs to the amplifiers. If the hiss disappears, then plug in the component driving the amplifier and unplug its inputs. If the hiss disappears at this point, go on until the faulty/noisy component is found. It is best to set the amplifier's input level control as low as possible. The best subjective signal-to-noise ratio is achieved in this manner. Try to set the head unit as high as possible (without distortion) and the amp input level as low as possible.</i>
Squealing noise from speakers.	<i>Check for improperly grounded RCA interconnects.</i>
Distorted sound.	<i>Check that the Input Level Control is set to match the signal level of the head unit. Always try to set the Input Level as low as possible. Check that all crossover frequencies are properly set. Check for short circuits on the speaker leads.</i>
Amplifier gets very hot.	<i>Check that the minimum speaker impedance for the amp model is correct. Check that there is good air circulation around the amp. In some applications, it may be necessary to add an external cooling fan.</i>
Engine noise (static type)	<i>This is usually caused by poor quality RCA cables, which can pick up radiated noise. Use only the best quality cables, and route them away from power cables.</i>
Engine noise (alternator whine)	<i>Check that speaker leads are not shorted to the vehicle chassis. Check that the RCA grounds are not shorted to the vehicle chassis. Check that the head unit is properly grounded.</i>

Introduction

With the  Compact Class D series, we are introducing one monoblock and one 4 channel CLASS D amplifier. Both are designed in the USA.

The monoblock model EV3KMINI models features variable low pass and subsonic filters and a variable input gain control. These amplifiers also incorporate a phase selector switch to help compensate for time delays in subwoofer applications.

The 4 channel model EV4.2KMINI features variable low pass and high pass filters and a variable input gain control.

For further flexibility in the use of a subwoofer, a variable 0-+18dB Bass Boost control has been included in the EV3KMINI, and the EV4.2KMINI features 0-to+12dB Bass Boost and Treble Boost controls. Both models allow you to control the subwoofer level with the remote level control module.

Features

Your new amplifier features the following:

- Class D operation
- MOSFET PWM (Pulse Width Modulated) Power Supply
- Thermal, overload and speaker short protection
- Soft turn-on circuit
- Remote turn-on/turn-off circuit
- Variable input gain control
- Nickel-plated RCA low level inputs
- Nickel-plated speaker and power terminals
- LED power and protection indicators
- Black anodized heatsink
- Remote subwoofer level control

EV3KMINI only:

- Variable subsonic filter: 10-45Hz, 12dB/octave

- Variable low pass filter: 30-1kHz, 12dB/octave

- Variable 0-+18dB Bass Boost

- 0-180° Phase Shift control

EV4.2KMINI only:

- Variable high pass filter: 50-500 Hz, 12dB/octave

- Variable high pass filter: 50-500 Hz, 12dB/octave

- Variable 0-+12dB Bass Boost


- Variable 0-+12dB Treble Boost

What is included?

When first unpacking your new amplifier, please check first that the package contains all of the items below. If something is missing, contact the store where you purchased the amplifier.

- Class D amplifier
- Remote subwoofer level control
- Remote subwoofer control cable
- Four (4) mounting screws

General precautions

Before installing and using your new  amplifier, please become familiar with all the information contained in this manual.

Please keep this manual in a safe place for future reference.

• Do not open or attempt to repair this unit yourself. Dangerous high voltages are present which may result in electric shock. Refer any repairs to a qualified service technician.

• To avoid risk of electronic shock or damage to the amplifier, do not permit any of this equipment to become damp or wet from water or drinks. If this does occur, immediately unplug the power wires and send the amplifier to your local dealer or service center as soon as possible.

• If there is smoke or any peculiar odor present during use or if there is damage to any of the component enclosures, immediately unplug the power cord and send the amplifier to your local dealer or service center as soon as possible.

Installation precautions

Before you drill or cut any holes, investigate your car's layout very carefully. Take special care when you work near the gas tank, fuel lines, hydraulic lines and electrical wiring.

Never operate the amplifier when it is unmounted. Attach all audio system components securely to prevent damage, especially in an accident.

Before making or breaking power connections in your system, disconnect the vehicle battery. Confirm that your head unit or other equipment is turned off while connecting the input jacks and speaker terminals.

If you need to replace the power fuse, replace it only with a fuse identical to that supplied with the amplifier. Using a fuse of a different type or rating may result in damage to your audio system or your amplifier which is not covered by the manufacturer's warranty.


Mounting the amplifier

1. Find a suitable location in the vehicle in which to mount the amplifier.
2. Make sure there is sufficient air circulation around the intended mounting location.


Power Connections

4-Channel Amplifier EV4.2K_{MINI}

Without Stiffening Capacitor

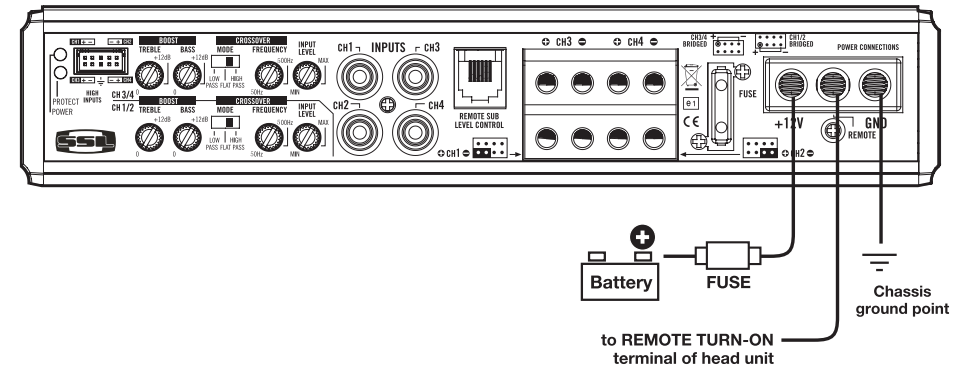


With Stiffening Capacitor

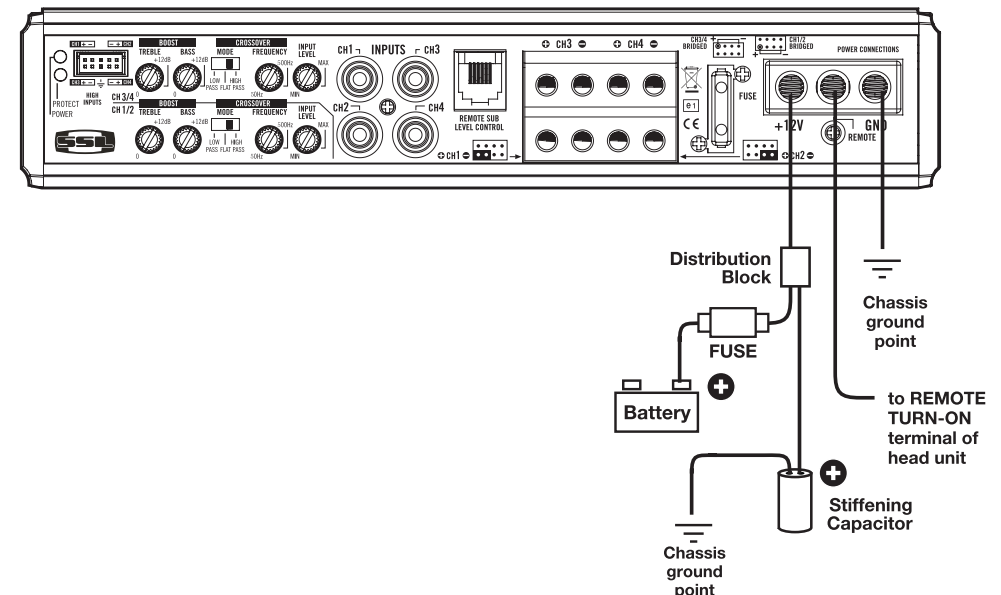


Power Connections

MonoBlock Amplifier EV3KMINI

Without Stiffening Capacitor

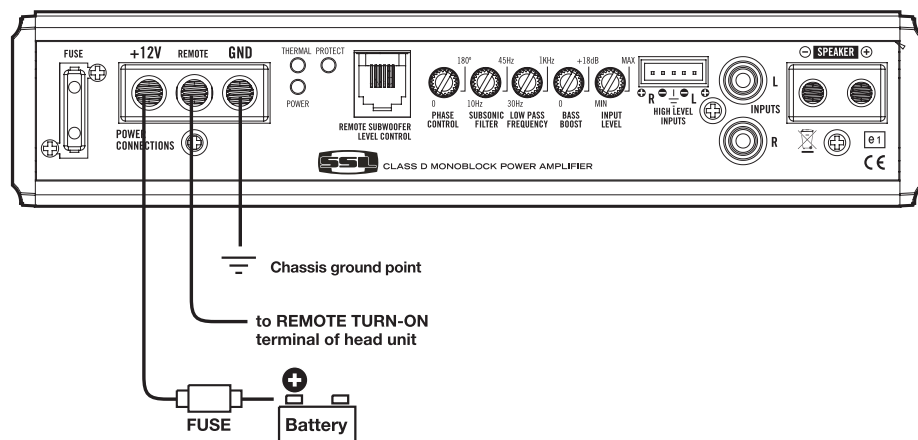

With Stiffening Capacitor

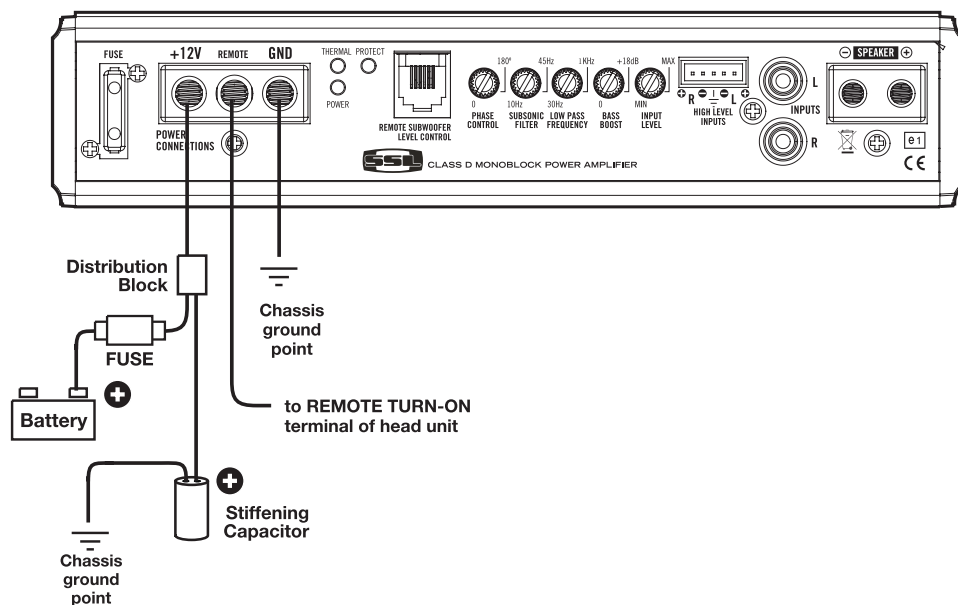

3. Mark the location for the mounting hole screws by positioning the amplifier where you wish to install it. Use a scribe or mounting screw, inserted through each of the amp's mounting holes, to mark the mounting surface. If the mounting surface is carpeted, measure the hole centers and mark with a felt tip pen.

4. Drill pilot holes in the mounting surface for the mounting screws. Place the amplifier in position, and attach the amplifier to the mounting surface securely using screws.

Connecting the amplifier

Before doing any wiring, look through this manual and identify the diagrams to follow for power, input and speaker connections for your particular installation. Be sure you understand all the connections before you proceed.

1. Connect the amplifier's power ground terminal to the closest point on the chassis of the car. Keep this ground wire to less than 39" (100 cm) in length. Use 4 gauge (or heavier) wire.

2. Connect the remote terminal to the remote output of the head unit using 16 gauge (or heavier) wire.

3. Connect an empty fuse holder within 18" (45 cm) of the car battery, and run 4 gauge (or heavier) cable from this fuse to the amplifier location.

The purpose of placing a fuse in this location is to protect your vehicle's battery in the event that this wire accidentally touches the chassis ground on its run to the amplifier.

4. Check that the fuse holder is empty. Then connect the fuse holder to the "BATT+" connection on the amplifier.

5. If multiple amplifiers are being used in your system, either:

- Run a separate pair of cables from the battery and a chassis ground point to each amplifier. Each (+) cable must have its own inline fuse.

-or-

- Run a #0 cable from the fuse holder at the battery to a distribution block at or near the amplifier's location. Then run separate cables from the amplifier to this distribution block and to independent chassis ground points.

6. Connect all line inputs and outputs (if used) using high-quality cables. Connect all speakers, following the diagrams in this manual. Be sure to observe proper polarity to avoid audio phase problems.

7. Insert fuse(s) into the battery fuse holder(s).

8. Recheck all connections before powering up the amplifier.

9. Set all level controls to minimum position, and set all crossover controls/switches to the desired frequency points.

10. Power up the head unit and the amplifier. Then set the volume control on the head unit to about 3/4 volume, and adjust the amplifier's input level control(s) to just below the level of distortion.

11. Further fine tuning of the various controls may be necessary to obtain best results.

Important installation considerations for using this amplifier.

Your Class D amplifier is designed to run with a minimum load of 2 Ohms.

Operating the EV3K_{MINI} or EV4.2K_{MINI} with a speaker impedance load below 2 Ohms may result in poor sound quality and damage to the amplifier circuitry. Such damage is not covered under the warranty for this product.

The fuse ratings for these amps is:

EV3K_{MINI}: 40A
EV4.2K_{MINI}: 40A

Although sufficient for normal working conditions, overloading the amp may result in blown fuses. Please try to avoid overloading the amp in this manner.

Don't misuse the level control!

Do not mistake the input level control for a volume control! It is designed ONLY to match the output level of your audio source to the input level of your amplifier.

Do not adjust this input level to maximum unless your input level requires it.

Ignoring these instructions will result in an input overload to the amplifier, and excessive audio distortion. It can also cause the protection circuit to engage.

Tips for making your system as safe as possible

When making electrical connections to the amplifier, please observe the following:

- Always use 4GA or heavier wire for power and ground connections.
- Wire the amplifier directly to the car battery. Make sure there is circuit protection (such as a fuse) on the positive power lead within 18" of the battery.
- When making a ground connection, always use the shortest possible wire to a good chassis ground point.
- Wire the remote turn-on connection to the remote turn-on lead of your EQ or head unit. In some cases, this may be the power antenna lead of the head unit.
- Fuses protect BOTH the amplifier and the electrical system of your vehicle from faulty conditions. If you must replace a fuse on the amplifier, you must use a fuse of exactly the same type and rating. A different type of fuse or rating may result in damage or cause a fire.

SHOCK HAZARD! Do not open the case of this product. There are dangerous voltages present within the unit. There are no user-serviceable parts within the unit.

Speaker Connections


4-Channel Amplifier

EV4.2K_{MINI}

Tri Mode

Tri-mode operation allows you to connect this amplifier to a pair of main speakers plus a subwoofer on one pair of output channels. The main speakers will operate in STEREO while the subwoofer simultaneously operates in MONO.


To set up the amplifier to run in this mode, put the crossover switches in the FULL position. Insert high pass filter capacitors and a low pass filter inductor into the wiring as shown below. Be sure to check the table at the bottom of this page to determine the correct capacitor and inductor values for the crossover frequency you wish to achieve.

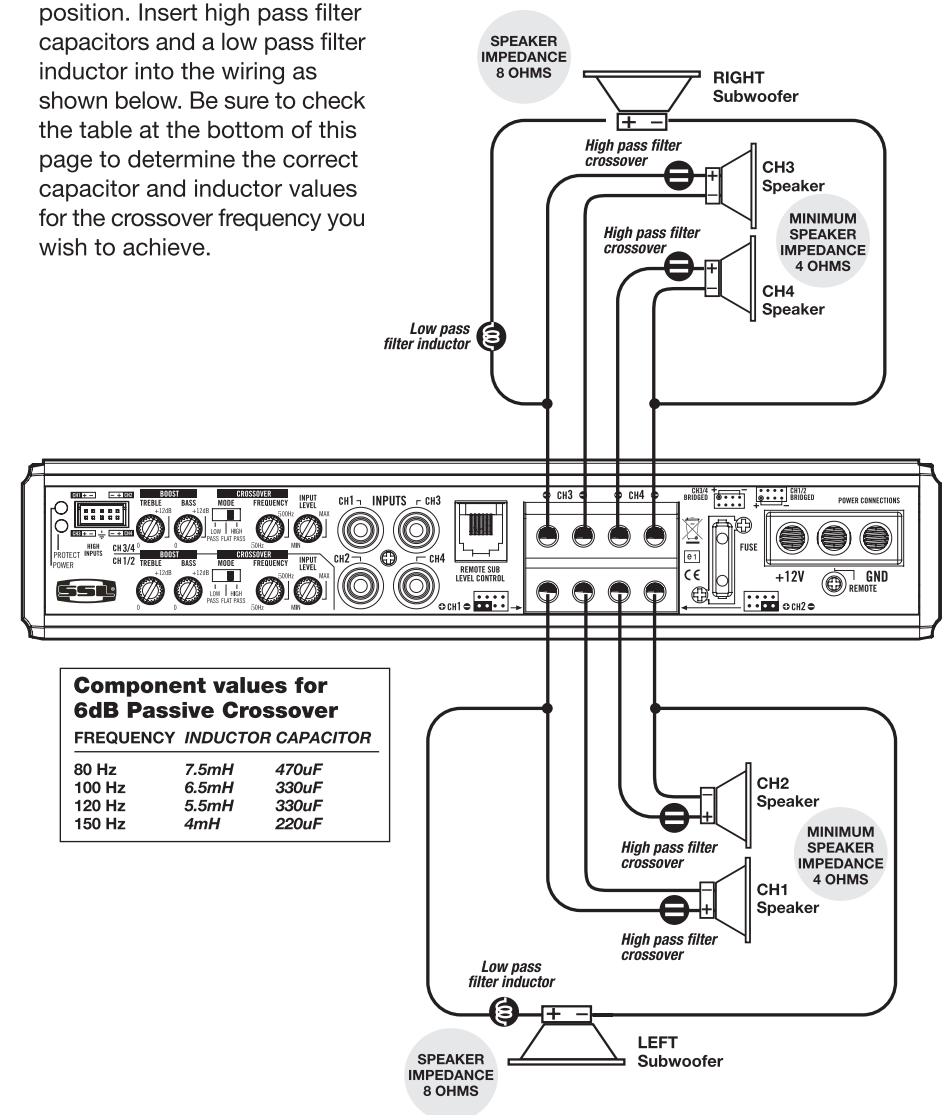

Speaker Connections


Low-level (RCA) input wiring is preferred for best audio performance. Always use a high-quality RCA cable for best audio performance.

4-Channel Amplifier EV4.2K_{MINI}

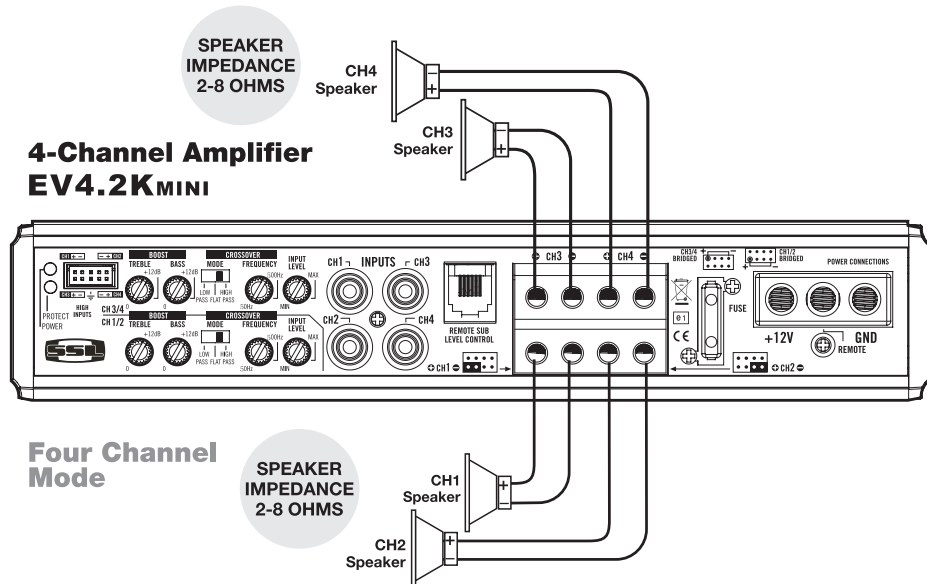

Four Channel Mode

4-Channel Amplifier EV4.2K_{MINI}

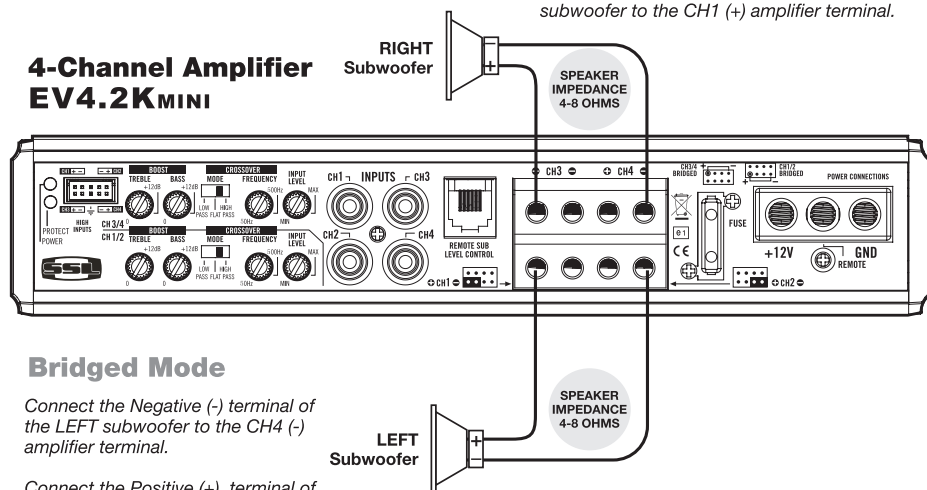

Bridged Mode

Connect the Negative (-) terminal of the LEFT subwoofer to the CH4 (-) amplifier terminal.

Connect the Positive (+) terminal of the LEFT subwoofer to the CH3 (+) amplifier terminal.


Connect the Negative (-) terminal of the RIGHT subwoofer to the CH2 (-) amplifier terminal.

Connect the Positive (+) terminal of the RIGHT subwoofer to the CH1 (+) amplifier terminal.


Low Level Input Wiring

Low-level (RCA) input wiring is preferred for best audio performance. Always use a high-quality RCA cable for best audio performance.

MonoBlock Amplifier EV3K_{MINI}

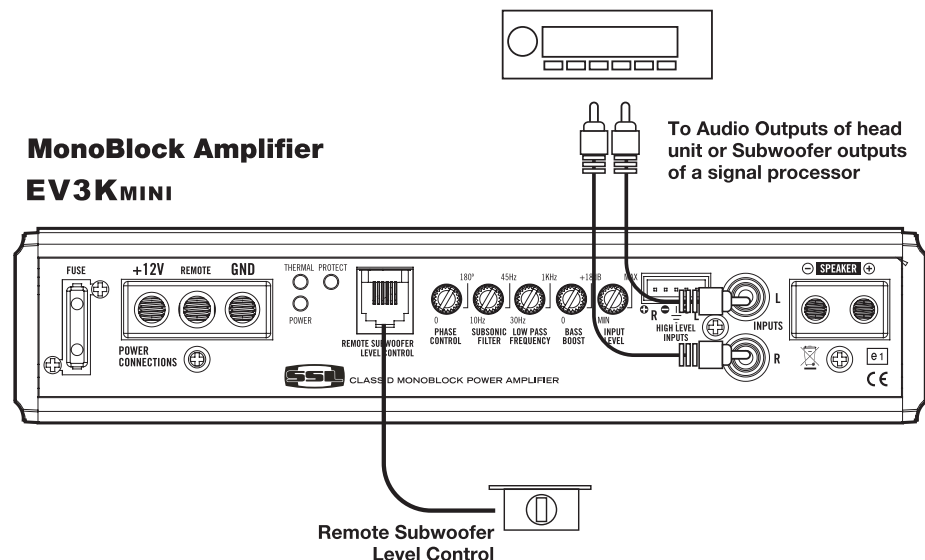

4-Channel Amplifier EV4.2K_{MINI}

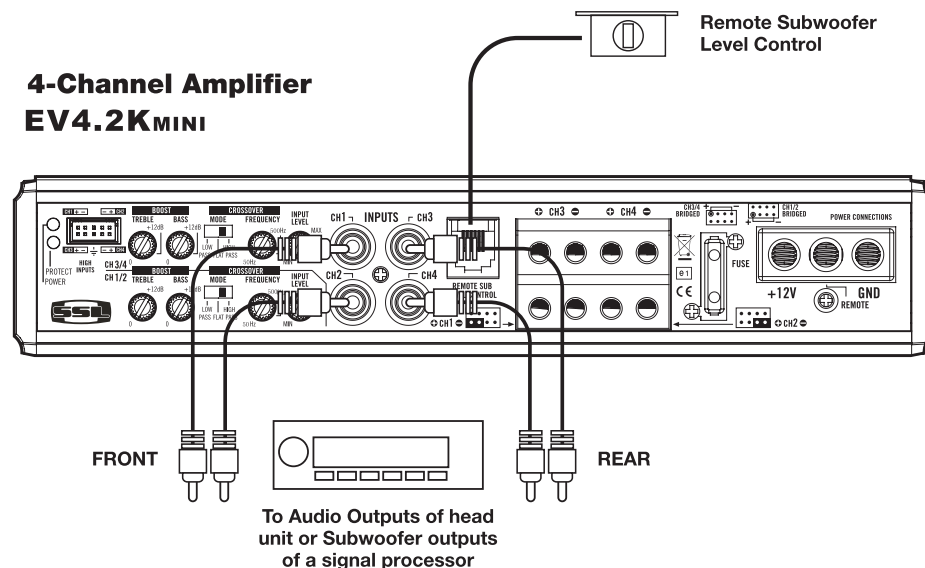


High Level Input Wiring


The high level input(s) should only be used when your head unit lacks RCA outputs. If the RCA outputs are not present, connect the speaker outputs from the receiver to the high level input connector of the amplifier. Be sure to observe polarity to avoid audio phase problems.

NOTE: Do not connect BOTH the high level and low level inputs from your receiver to your amplifier at the same time!

MonoBlock Amplifier EV3K_{MINI}

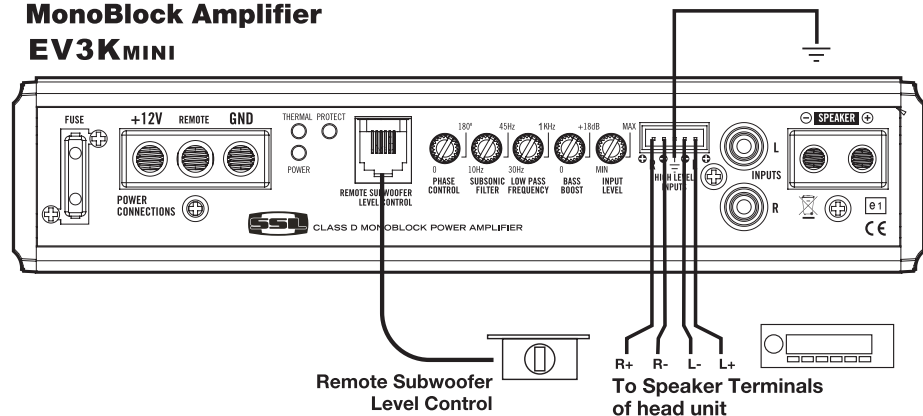

4-Channel Amplifier EV4.2K_{MINI}

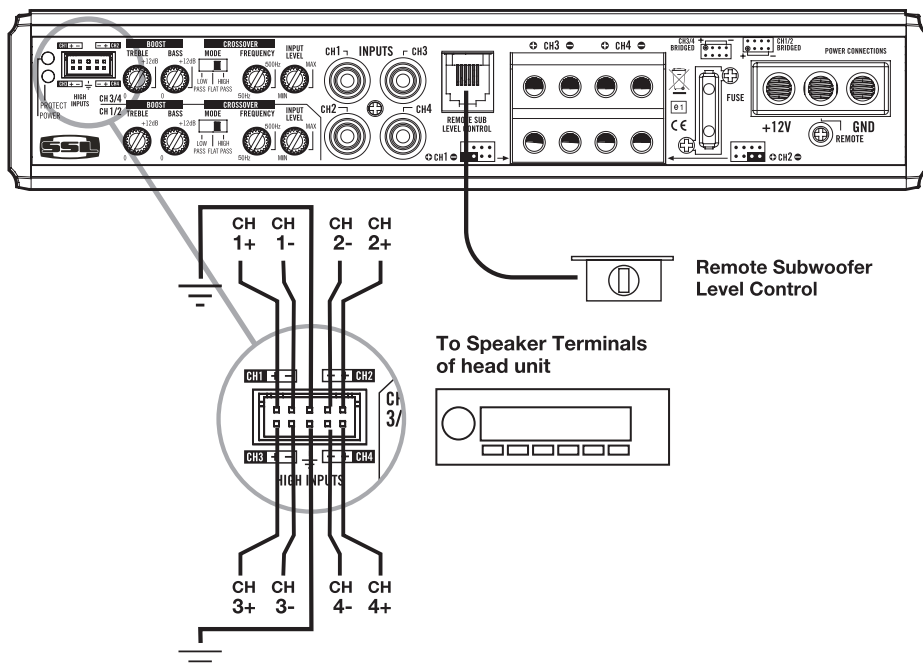

Speaker Connections

Low-level (RCA) input wiring is preferred for best audio performance. Always use a high-quality RCA cable for best audio performance.

MonoBlock Amplifier EV3K_{MINI}

