

Warning

- ▶ Read this manual before using this product.
- ▶ This product is composed of precision components and shall not be disassembled unless approved or authorized by us, otherwise we shall not provide any maintenance
- ▶ protect the product from moisture and shock



Product structure

Important: Do not hit or press the monitor.
Do not confuse the positive and negative poles.
As there is high voltage inside, do not dismount the product unless you are a professional.

Special : Our pillow products with adjustable intervals have been patented in Japan. Nobody shall take our products into Japan after modification or through transfer, otherwise they shall bear any consequence arising therefrom.

The specifications of this product are subject to our modification without notice.

Product specifications

Name: TFT-LCD color monitor
Mode: N/P
Resolution: 800x480xRGB=1152000
Power supply: +12V
Power: 6W

Operation environment

1. Ambient temperature -10°C—55°C
2. Relative humidity <90% (+55 °C)

9.2 " Weight and size (6/case)

Net weight: 1.52kg
Gross weight: 2.19kg
Net weight/case: 9.12kg
Gross weight/case: 13.14kg

9.2 " Weight and size (12/case)

Net weight/case: 18.24kg
Gross weight/case: 25.7kg

Size (6/case)

Package box size: 58.3x29.5x12.3
Package case size: 59.5x39x31.3

 
Size (12/case)

Package box size: 58.3x29.5x12.3
Package case size: 59.8x39x61

How to use the pillow monitor

Thanks for your support. To ensure long-term trouble-free service of the product, please read this Manual carefully before using the monitor.

Structure



TX-2092

Manual button
(remote control possible)

- 1 Colour LCD screen
- 2 Frequency infrared transmit of stereo
- 3 Infrared Remote Reception
- 4 Analog minus
- 5 Menu
- 6 Analog plus
- 7 Power switch
- 8 Adjustable steel Pipe

Remote control



Menu

Press this button repeatedly for the following

BRIGHT
CONT
COLOR
TINT
RESET
TINT (For ntsc mode only)

Installation

1. Take down the original pillow in the car.
2. Install the pillow of this monitor. Adjust the steel tube in or out (max. interval: 5cm) according to the interval between pillow holes so that the interval between steel tubes of the pillow monitor coincides with that between steel tubes of the original pillow.
3. The circuit connection of the pillow monitor is very simple. As shown in Fig. connect the +12V power of the sound system (red line to +, black line to ground), and then connect the video signals.
4. After the pillow monitor is connected properly, press the Power switch and the screen lights up; press Menu, adjust Analog Plus or Analog Minus to the desired mode, or use the remote control if any.



Min. Interval



Max. Interval

Move the steel tubes back and fro to pull them in and out so that the interval between steel tubes coincides with that of the original pillow.



Install the pillow



The circuit connection of the pillow monitor is very simple. As shown in Fig. connect the +12V power of the sound system (red line to +, black line to ground), and then connect the video signals. Connect the video signals, hide the connector in the base

How to use the accessory tubes



As pillow holes are of different sizes, this product is provided with two tubes 12mm in diameter. When the pillow hole is large, fit this fitting to meet different needs.