

SB9FI

**9-INCH FLIP-DOWN WIDESCREEEN TFT MONITOR
WITH BUILT-IN INFRARED TRANSMITTER**

01.2010



SOUND STORM®
L A B O R A T O R I E S

3451 LUNAR COURT, OXNARD CA 93030

PHONE: 888.38.STORM

805.983.8008

FAX: 805.983.7068

TECHNICAL SUPPORT:

www.soundstormlab.com



User's Manual



SB9FI

**9-INCH FLIP-DOWN
WIDESCREEEN TFT MONITOR
WITH BUILT-IN INFRARED TRANSMITTER**

Thank you for purchasing the TFT LCD color monitor . To enjoy the features of this device and to ensure years of trouble-free operation, please read this manual carefully and follow the instructions.


FRONT PANEL



- 1. IR transmitter&Lights
- 3.MODE
- 5.Monitor release button
- 7.Remote window
- 9.+

- 2.Light switch
- 4.AV
- 6.Power
- 8.MENU
- 10.-

REMOTE CONTROL

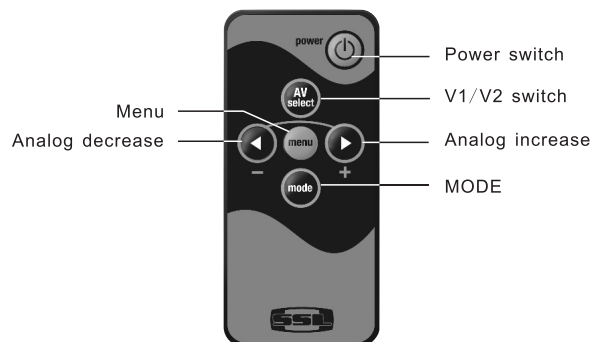


SPECIFICATIONS

Type: TFT LCD
 Display format: 16:9
 Power supply: DV 12V
 system: NTSC/PAL
 Operation temperature: $-5^{\circ}\text{C} \approx +60^{\circ}\text{C}$
 Video input: Two composition video signal
 Power: $\leq 12\text{W}$
 Built-in dome lights
 Built-in IR transmitter

CAUTIONS

Never connect the car monitor to cigarette lighters tor such as trucks or buses which use 24V DC power.
 Do not expose the monitor to high humidity, dust, steam, oily smoke, direct sunlight etc.
 For your safety, turn power OFF when not in use and unplug the adaptor.
 Never attempt your own maintenance. Consult your TV dealer or the company.
 Avoid dropping and strong impact.
 For your safety, the driver should not watch the TV or operate the controls while driving.

WIRING DIAGRAM

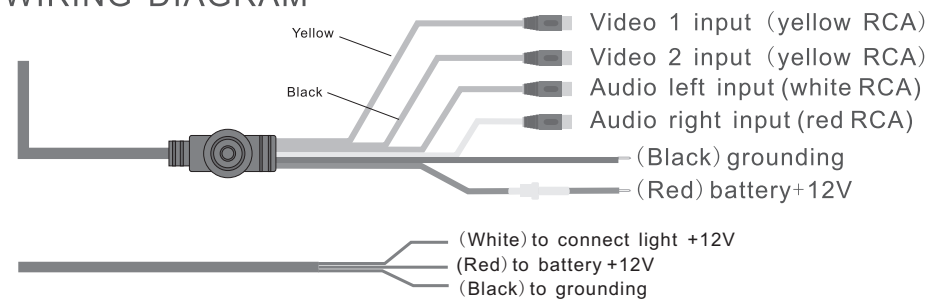

ACCESSORIES

One Remote	One User Manual
One Fix Board	Four Screw

WARNING:

Do not watch TV while vehicle in motion it can be hazardous.

Please contact an authorized installer for Professional Installation.