

## **SD511MB**

**BLUETOOTH®-ENABLED**

**IN-DASH AM/FM DVD/MP3/CD RECEIVER**

**WITH 5-INCH WIDESCREEN TOUCHSCREEN TFT MONITOR**

**WITH USB AND SD MEMORY CARD PORTS AND FRONT PANEL AUDIO INPUT**

05.2010

## ***User's Manual***



**SOUND STORM®**  
L A B O R A T O R I E S

3451 LUNAR COURT, OXNARD CA 93030

PHONE: 888.38.STORM

805.983.8008

FAX: 805.983.7068

TECHNICAL SUPPORT:

[www.soundstormlab.com](http://www.soundstormlab.com)



iPod® is a trademark of Apple, Inc.,  
registered in the U.S. and other countries.

Sound Storm Laboratories is not affiliated with Apple, Inc.

## **SD511MB**

**BLUETOOTH®-ENABLED**

**IN-DASH AM/FM DVD/MP3/CD RECEIVER**

**WITH 5-INCH WIDESCREEN TOUCHSCREEN TFT MONITOR**

**WITH USB AND SD MEMORY CARD PORTS  
AND FRONT PANEL AUDIO INPUT**



SD511MB

# Contents

In-Dash AM/FM-RDS/Bluetooth  
DVD/MP3/CD Receiver With  
5" Widescreen Touchscreen TFT Monitor  
With Front Panel USB Port and  
SD/MMC Card Slot

<b>Precautions .....</b>	<b>2</b>	<b>DISC Special Functions .....</b>	<b>26</b>
<b>Safety Information.....</b>	<b>3</b>	Selecting audio languages .....	26
<b>Disc Notes .....</b>	<b>4</b>	Selecting Subtitles .....	26
<b>Installation .....</b>	<b>5</b>	Selecting multi-angle views .....	26
Detaching the front panel .....	7	Title menu function .....	26
Attaching the front panel .....	7	<b>Setup .....</b>	<b>27</b>
Angle panel adjustment .....	8	System Setup.....	27
<b>Electric Connection .....</b>	<b>9</b>	Languages Setup.....	29
<b>Remote Control .....</b>	<b>10</b>	Audio Setup .....	30
<b>Basic Operations .....</b>	<b>13</b>	Video Setup .....	30
TFT Monitor Adjustment .....	13	Digital Setup .....	31
Rear View Camera .....	13	<b>AUX Operations .....</b>	<b>32</b>
Audio Quality Adjustments .....	14	<b>Bluetooth Operations .....</b>	<b>33</b>
Setting Audio Mode .....	14	<b>USB Operations .....</b>	<b>35</b>
Setting the background .....	14	<b>SD Card Operations .....</b>	<b>37</b>
Reset Factory Settings .....	15	<b>MP3/WMA/JPEG/MPEG4 Play .....</b>	<b>38</b>
<b>Control Panel .....</b>	<b>16</b>	<b>Specifications .....</b>	<b>39</b>
Unit keys .....	16	<b>Trouble Shooting .....</b>	<b>40</b>
<b>Radio Operations .....</b>	<b>18</b>		
Listening to the radio .....	18		
Storing stations in memory .....	18		
Listening to a preset station .....	19		
RDS Function .....	20		
<b>DISC Operations .....</b>	<b>22</b>		
Basic Operations .....	22		
Select Playback Mode .....	23		
On-Screen Disc Operations .....	25		

# Precautions

---

## **THANK YOU FOR PURCHASING THIS CAR DVD PLAYER .**

Before operating the unit, read this manual thoroughly and keep it handy for future reference .

To avoid injury or accident , read the following precautions before installing and operating the unit .

## **ON INSTALLATION**

- DO NOT install any receiver in locations where;
  - it may obstruct the steering wheel and gearshift lever operations, as this may result in a traffic accident.
  - it may obstruct the operation of safety devices such as air bags, as this may result in a fatal accident.
  - it may obstruct visibility.
- DO NOT operate any receiver while manipulating the steering wheel, as this may result in a traffic accident.
- The driver must not watch the monitor while driving.
- IF THE DRIVER watches the monitor while driving, it may lead to carelessness and cause an accident.
- IF YOU NEED to operate the receive while driving, be sure to look ahead carefully or you may be involved in a traffic accident.
- IF THE PARKING BRAKE is not engaged. "ParkingBrake" flashes on the monitor, and no playback picture will be shown.
  - This warning appears only when the parking brake wire is connected to the parking brake system built in the car ( refer to the electric connection)

## **ABOUT THE LIQUID CRYSTAL DISPLAY (LCD) PANEL**

Do not press on the LCD panel on the unit as doing so can distort the picture or cause a malfunction . The picture may become unclear , or the LCD panel may be damaged .

## **NOTES ON CLEANING**

- Clean the LCD panel with a slightly damp soft cloth.
- Do not use solvents such as benzine, thinner, commercially available cleaners or antistatic spray .
- Do not use alcohol to clean the screen .

If your car was parked in a cold or hot place, the picture may not be clear . The monitor is not damaged . The picture will become clear the temperature in your car becomes normal .

# Safety Information

---

## **CAUTION:**

THIS DVD PLAYER IS A CLASS I LASER PRODUCT. HOWEVER THIS DVD PLAYER USES A VISIBLE/INVISIBLE LASER BEAM WHICH COULD CAUSE . HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE DVD PLAYER CORRECTLY AS INSTRUCTED.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## **WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.

THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macro vision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## **REGION MANAGEMENT INFORMATION:**

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD Player, this DVD Player cannot play this disc.

# Disc Notes

## Disc formats supported by this player

DVD	<b>DVD</b>	Audio and Video Disc size 12 cm
VCD	<b>VCD</b>	Audio and Video Disc size 12 cm
CD	<b>CD</b>	Audio Disc size 12 cm
MP3	<b>MP3</b>	Audio Disc size 12 cm

## Discs which cannot be played with this player

- DVD-RAM
- CDV
- CDG

## Handling and Cleaning

- Dirt, dust, scratches and warping disc will cause misoperation.
- Do not place stickers or make scratches on discs.
- Do not warp discs.
- A disc should always be kept in its case when not in use to prevent from damaging.
- Do not place discs in the following places:
  - 1.Direct sunlight
  - 2.Dirty, dusty and damp areas
  - 3.Near car heaters
  - 4.On the seats or dashboard


## Disc Cleaning

Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moistured with isopropyl (rubbing) alcohol. Never use solvents such as benzine, thinner or conventional record cleaners as they may mar the surface of the disc.

### Note:


A disc may become somewhat scratched (although not enough to make it

unusable) depending on your handle it and conditions in the usage environment. Note these scratches are not an indication of any problem with the player.

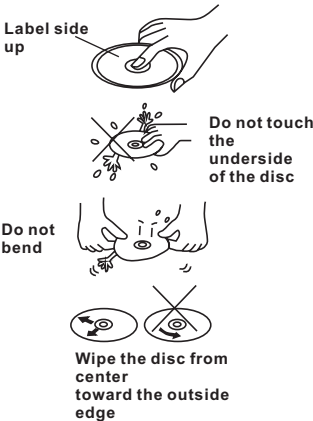

## Preparing New Discs with Rough Spots

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ball point pen or pencil as shown on the right. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

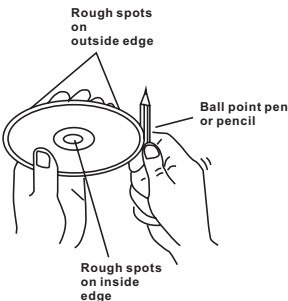

# Installation

---

## NOTES:

Choose the mounting location where the unit will not interfere with the normal driving function of the driver.


Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.

Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.

Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.

Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.

If installation angle exceeds  $30^{\circ}$  from horizontal, the unit might not give its optimum performance.

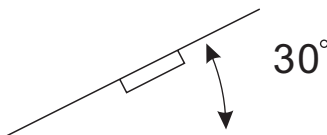


Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.

## DIN FRONT/REAR-MOUNT

 This unit can be properly installed either from "Front"(conventional DIN Front-mount) or "Rear"(DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.



## USA/EURO FREQUENCY SWITCH

On the right of this device, there is a USA/EURO frequency switch, you can select the desired radio frequency before installing .

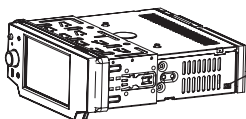

**USA/EURO Frequency Switch** (radio frequency switch for selecting between the USA and EUROPE frequency band. )

# Installation

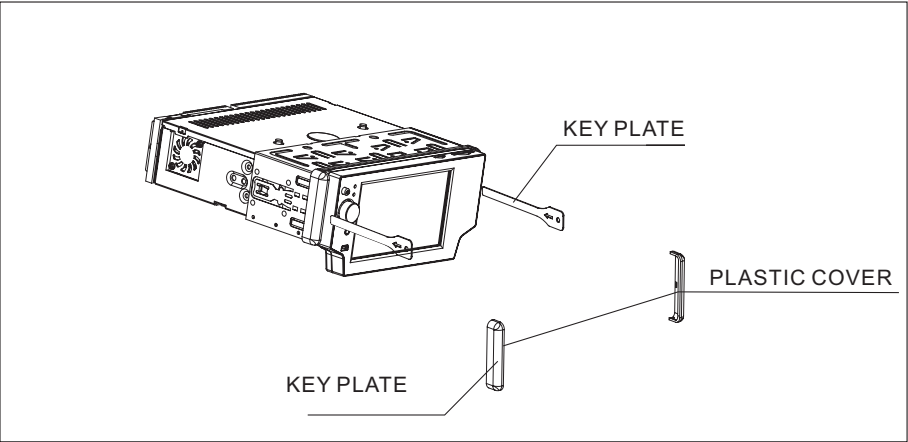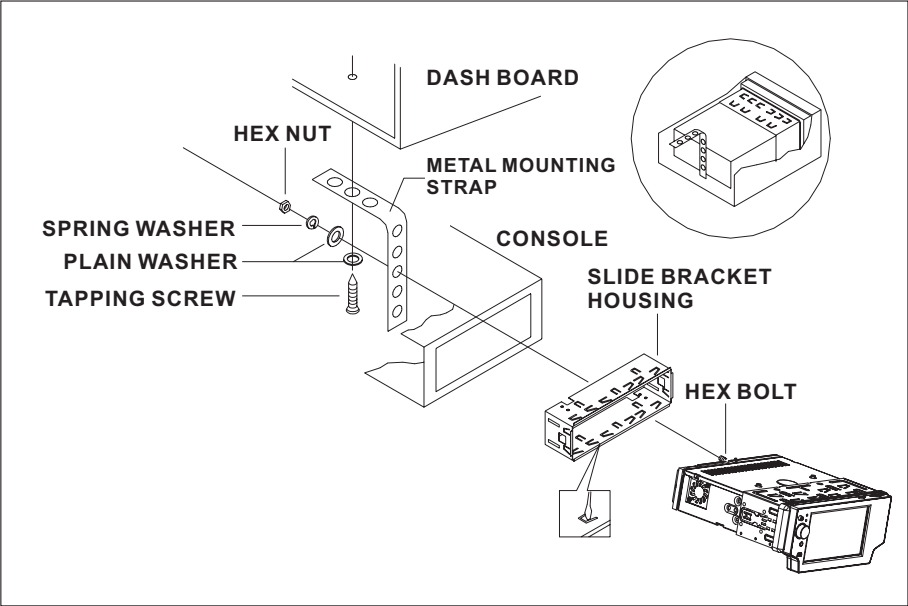

If you want to take CHASSIS out of the SLIDE BRACKET HOUSING, first remove the PLASTIC COVER of the both sides away, then insert the two KEY PLATE into left and right side of chassis as above illustration.

# Installation


## How To Remove And Install The Front Panel

When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.


### Detaching The Front Panel

Before detaching the control panel, be sure to turn off the power.

1). Press the release button and the left hand side of the front panel will release.

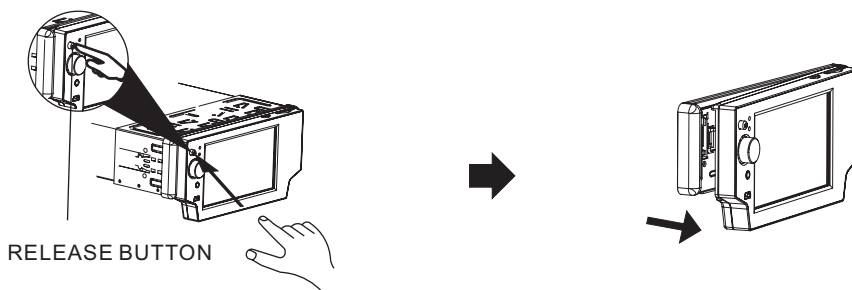

2). Pull-off the front panel and keep the front panel into the case .

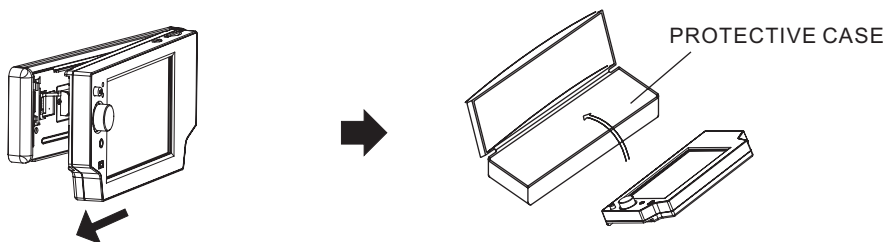


### Attaching The Front Panel

1). First insert the right hand side of the front panel into the hollow of the unit .

(NOTE : the "bulge" point on the panel must be attached into the hollow of the unit .)

2). Gently push the left hand side of the front panel until you feel a " Click" .

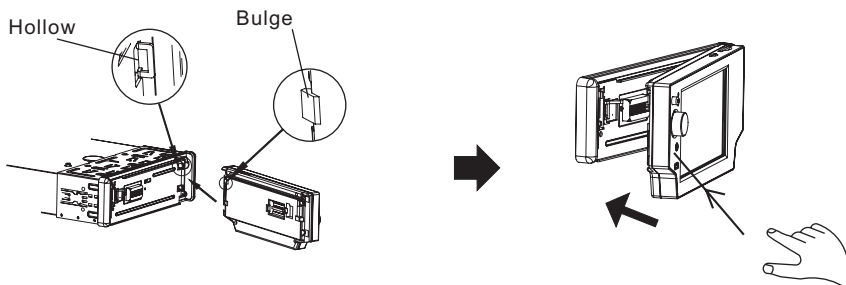






# Panel Angle Adjustment

---

## CHANGING THE CONTROL PANEL ANGLE

When you want to change the viewing angle of the operating unit to play, you can touch the  section on touch screen (or touch the  icon on the front panel) repeatedly to select the desired angle as follows:

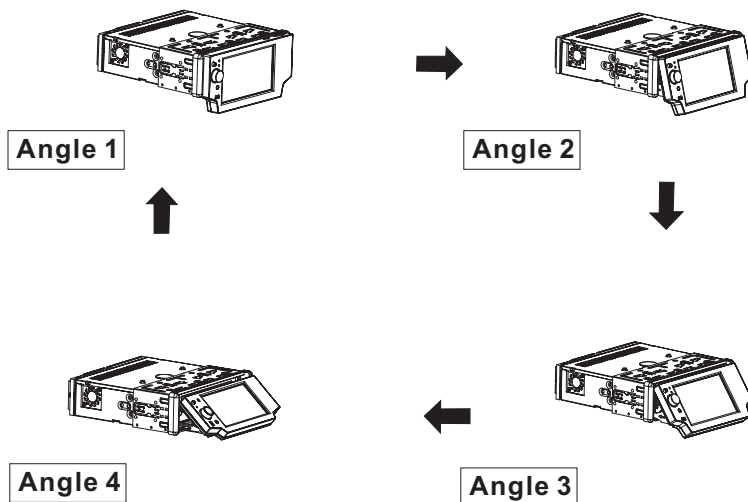


### Caution:

Do not insert your finger behind the control panel.

# Electric Connection


## WIRING CONNECTION

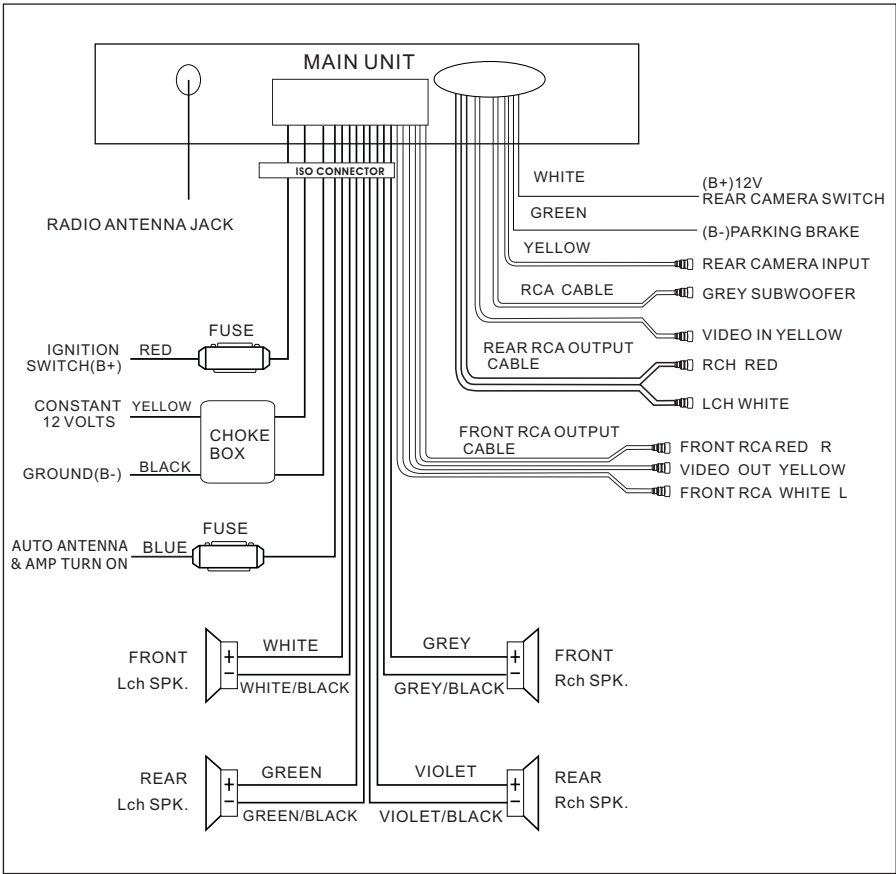



**Note:**

The "PARKING BRAKE" wire must be connected to the parking brake system of your car. When the parking brake is engaged, the LCD screen will be allowed to view your video. If not, the screen will produce an image saying, "PARKING BRAKE" This is a safety feature designed for the driver not to watch a video while driving. The video output on this unit is not affected by this.
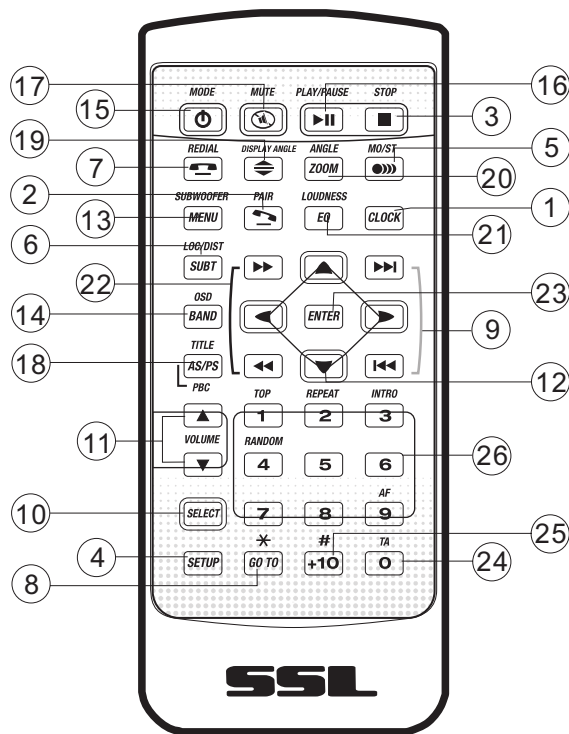
# Remote Control



Ref #	Button	Function
1	CLOCK	Press it briefly to view the clock time , Press again to return to normal display mode .
2	PAIR/ 	Press it to use the Bluetooth function , refer to the page 33 .
3	STOP	Press once to pause playback. Press PLAY/PAUSE to resume playback. Please note: if you press STOP twice, playback will start at the beginning of the disc.
4	SETUP	Press this button to open the SETUP menu.
5	MO/ST (AUDIO)	In Radio mode, press this button to change between Mono and Stereo reception modes (when a station is weak, sometimes switching to Mono will improve sound quality). In Disc Playback mode, pressing this button opens the AUDIO setup menu for making changes to the way the soundtrack is reproduced.
6	SUBTITLE LOCAL/ DISTANT	In DVD Disc Playback mode, pressing this button will allow you to change the subtitle language on discs which have this as an option. In Radio mode, press this button to change the radio reception sensitivity in stations are near or far.
7	Redial/ 	Press this button to use the Bluetooth function, refer to page 33.

# Remote Control

Ref #	Button	Function
8	GOTO ✱	Press it button to begin playback at a moment in the program you designate. Use number buttons to enter the data that is needed. In Bluetooth menu, it serves as the asterisk button on your mobile handset.
9	⏮ / ⏭	Press these buttons to skip ahead or back one track.
10	SEL	Press this button repeatedly to cycle through the various audio and video adjustments you can make: Volume, Bass, Treble, Balance, Fader, Color, Brightness, Contrast and Tint.
11	VOL+/-	Use these controls to adjust the volume level.
12	▲/▼/◀/▶	Press to navigate the various menus present in the product.
13	Menu SubWoofer	Press this button briefly to display the root level directory of a DVD disc. Press and hold this button to turn on or off the SUBWOOFER output.
14	BAND (OSD)	In Radio mode, press this button repeatedly to switch between the five radio bands: FM1 > FM2 > FM3 > AM1 > AM2. In Disc Playback modes, Press this button to see information about the disc currently in play.
15	⏻/MOD	Press this button to turn the unit ON , press and hold to turn the unit OFF. Press it briefly to select the Disc, Radio , AUX In , BT Music mode.
16	PLAY/ PAUSE	In Disc Playback mode, press to pause playback. Press again to start where playback stopped.
17	MUTE	Press this button to turn off the audio. Press again to restore the sound to its prior volume level.
18	TITLE/ PBC (AS/PS)	When playing a DVD, pressing this button will open the TITLE menu which is recorded on the DVD. When playing a VCD disc, press this button to create a PBC (Playback Control) menu for the disc to assist in making playback selections. In Radio mode, press and hold this button to start the Auto-Program mode, during which the tuner will scan for all strong stations and assign them to the radio preset buttons.
19	◀◀	Press it button to change the viewing angle of the operating unit .
20	ZOOM/ ANGLE	For DVD discs which have alternate viewing angles encoded, when you see the "angle mark" symbol advising you that these angles are available, longer press this button to see them. Shortly press it to increase the picture in size .
21	EQ/LOUD	Press repeatedly to cycle through the different equalizer curve presets you may wish to use for enhanced listening.
22	⏮ / ⏭	In Disc Playback mode, press for fast forward/reverse playback.


# Remote Control

Ref #	Button	Function
23	ENTER	This button is used to confirm selections and settings within many of the menus in the OSD system.
24	0-9	Use to input numerical values during programming, with the GOTO button, or to directly select a track to play . In addition, in Radio Mode (when RDS is engaged), 0 serves as the TA button and 9 serves as the AF button.
25	+10/#	This button is used with the other number buttons for use with two-digit number entries. In Bluetooth menu, it serves as the hash button on your mobile handset.
26	1-6	Six numbered preset buttons store and recall stations for each band

## Preparing the Remote Control

### Inserting the Battery

- 1.First push to inside as the direction indicated by the arrow (See ❶ )And then Remove the battery holder as the direction indicated by the arrow (See ❷ ).
- 2.Replace the battery Set a new battery property with (+)side up as illustrated (See ❸ ).
- 3.Insert the battery holder. Push in the holder to the original position(See ❹ ).

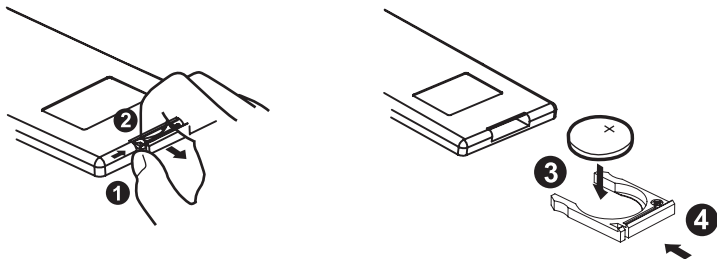

### Using the Remote Control

Face the remote control towards the player front face IR mark (remote control signal receiver).



Operation angle: About  $\pm 30$  degree in each the direction of the front of the IR mark.


### Note :

The lithium cell in the battery compartment of remote control has been secured for transport with a foil . Before initial use please remove this foil so that the remote control is ready for operation .

# Basic Operation

## TFT MONITOR ADJUSTMENT

when playing a DVD , touch screen of “” range to enter the main menu . Touch “” ICON to enter the setting mode, the message display in screen:

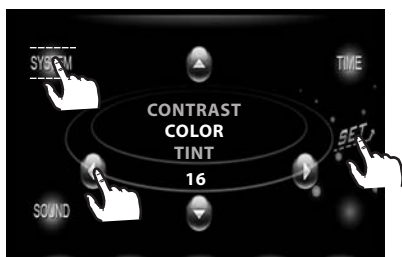

Touch the “**SYSTEM**” section on the setting menu, touch the “**▼ / ▲**” ranges to select the adjustment item, touch the “**◀ / ▶**” ranges to adjust the selectment item , then touch the “**SET**” to confirm . It's depend on your habit to setup the data .

### ADJUSTABLE ITEMS:

#### CONTRAST: 0 to 32

Adjust the contrast of the bright and dark portion.

#### COLOR: 0 to 32

Adjust the color for the picture-lighter or darker.

#### BRIGHTNESS: 0 to 32

Adjust if the picture is too bright or too dark.

#### BT ON/OFF

Touch to switch the Bluetooth function ON and OFF .

#### TINT: 0 to 32

Adjust the tint if the human skin color is unnatural.

-Adjustable when “NTSC “ is selected for “NTSC/PAL “ .

#### ANIMATION

In **RADIO** mode, you can change the playing time of animation among of “10SEC, 30SEC, 60SEC, 90SEC, 2MIN, 3MIN, 4MIN and OFF “.


#### Note:

Please set the playing time of the animation to “**10SEC**” for the first, when you turn the unit on .

## REAR VIEW CAMERA

When connecting the rear view camera. the mirror image of the rear view through the rear view camera is automatically displayed on the monitor when you change the gear to the back position. (Note: additional monitor can not display the image .)

## AUDIO QUALITY ADJUSTMENT

In home menu, touch the “” icon to enter into the SET mode, touch the “**SOUND**” icon to adjust the audio item. Like following as below :



In sound mode, touch “**▼ / ▲**” ranges to select the adjustment item, touch the “**◀ / ▶**” ranges to adjust the selectment item , then touch the “**SET**” range to confirm and back . It's depend on your habit to select the Audio mode .

# Basic Operation

## ADJUSTABLE ITEMS:

### TREBLE: -14 to +14

Adjust treble level .

### BASS: -14 to +14

Adjust bass level .

### BALANCE: R 0-10 to L 0-10

Adjust sound balance between left and right speakers .

### FADER: F 0-10 to R 0-10

Adjust sound balance between front and rear speakers .

### SUBWOOFER

Touch to switch the Subwoofer function ON and OFF .


### LOUDNESS

 
Touch to switch the Loudness function ON and OFF .

### BUZZER SET

Touch to switch the BUZZER BEEP function ON and OFF .

## Setting Audio Modes


In CD/AUX/BT MUSIC mode, touch the “” icon (or press EQ button on remote control) to select one of the preset sound modes: ROCK/POP/JAZZ/CLASSIC/FLAT . The information will display in the monitor as follow :

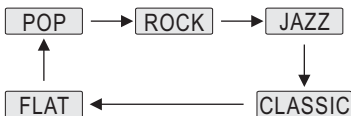

It`s depend on your habit to select the Audio mode .

## SETTING THE TIME

In SETTING mode, touch the “**TIME**” range to select the time mode .

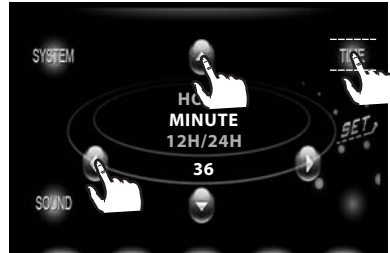

Touch the “**TIME**” section on the setting menu, touch the “**▼ / ▲**” ranges to select the adjustment item, touch the “**◀ / ▶**” ranges to adjust the selection item , then touch “**SET**” icon to confirm . It`s depend on your need to setup the data .

## ADJUSTABLE ITEMS:


Hour adjustment: 0-23

Minutes adjustment: 0-59

Time format selectment : 12H/24H

## Reset Factory Settings

RESET button is placed on the housing and must be activated with either a ballpoint pen or thin metal object.

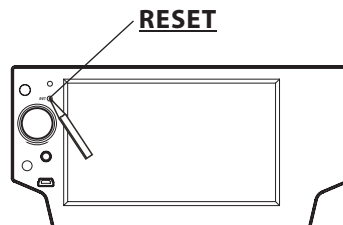


The **RESET** button is to be activated for the following reasons:

- A. Initial installation of the unit when all wiring is completed.
- B. All the function buttons do not operate.
- C. Error symbol on the display.

# Control Panel

## UNIT KEYS

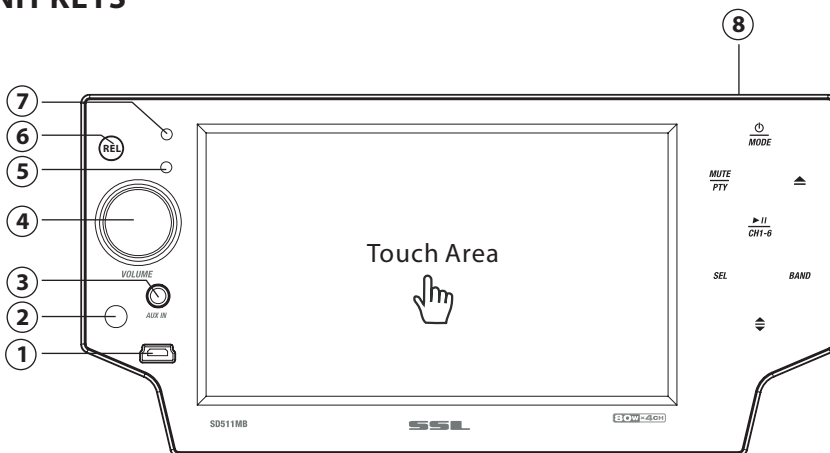

### ① USB OPERATION

For information about connecting a USB device, please see page 35.

### ② IR SENSOR

### ③ AUXILIARY INPUT JACK

Insert an external device to this AUX jack in order to have audio output of the device through the unit .

### ④ VOL-/VOL+ BUTTON

In normal mode, this button is used to adjust the volume to desired level .  
It is also used as an UP/DOWN button when audio or video settings are being adjusted when accessed using the SELECT button.

### ⑤ RESET BUTTON

Press this button to return to factory settings .

### ⑥ PANEL RELEASE BUTTON (REL)

Press this button to remove the control panel .

### ⑦ MIC

Microphone .


### ⑧ SD CARD SLOT



# Control Panel

## UNIT KEYS

(touch sensitive control)

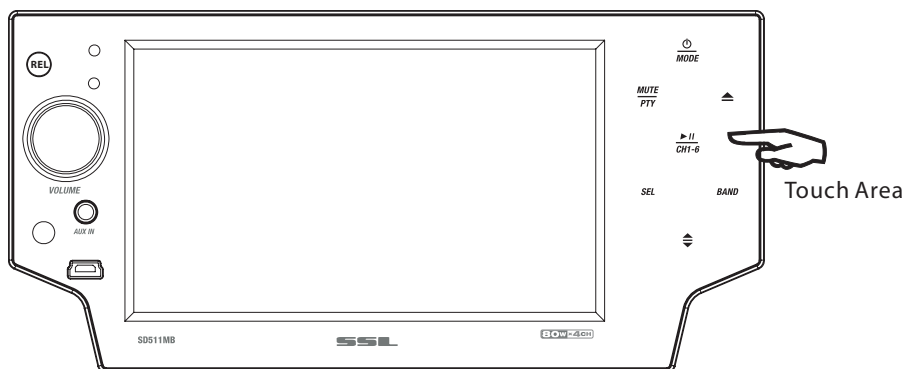

### ⏻ (POWER On/Off )/MODE

Touch this button to switch the device on. WELCOME appears in the display. Touch it again to switch the device off. SEE YOU appears in the display. In playback mode, you can touch this range to select the input mode by touching repeatedly until the proper one is found :

**DISC > AUX IN > RADIO > BT MUSIC .**



### MU (MUTE)/PTY

In any mode, touch this range to mute the sound .

In RDS Radio mode, touch this range repeatedly to step through the different station categories (such as NEWS, INFO, SPORTS, etc). When you have selected the category, the radio searches for stations in that category.



### ▲ (EJECT)

To insert a disc, touch this button. The panel will swing downward, exposing the slot. Insert the disc, label side facing up, until the mechanism senses its presence and draws the disc in. The panel will automatically return to its previous position.



### ▶|| (PLAY/PAUSE) /CH 1-6 (RADIO PRESET)

#### A) In Disc Playback Mode

touch this range to pause playback, touch this range to resume playback.

#### B) In Radio Mode

touch this range repeatedly to preset station. With this system a total of 30 stations can be stored in the memory . Each band store up to six preset stations. The stations might be FM1, FM2, FM3, AM1 (MW1) and AM2 (MW2) band.

# Control Panel

---

The operation as below:

## **-Store in Memory**

- > Select the frequency band
- > Touch repeatedly this range to select the desired memory key .
- > Select the station
- > Keep the desired memory key touched in until the station is heard again after a brief interruption .

## **-Retrieve a preset station**

touch this range repeatedly to retrieve a station which had been stored in the memory in advance the chose number is shown on display .



## **SELECT BUTTON**

To access the available adjustment settings for audio and video, touch this range repeatedly to cycle through and select them:



## **BAND**

Touch this range to switch between the 3FM and the 2AM(MW) bands .  
The designation of the corresponding level - **FM1, FM2, FM3, AM1(WM1), AM2(MW2)** - is shown in the TFT .



## **◆ ANGLE (Screen position)**

You can change the viewing angle of the operating unit. Touch this range up to four times in order to select your desired position .

# Touch Screen Operation

In any modes, touch “**MOD**” repeatedly to select the RADIO mode . (In home menu, touch the RADIO icon to enter into radio mode )



## 1. ▲ Button

touch this icon, the panel will to slid down, you can insert the DVD disc or eject the disk .

## 2. ⏻ Power button


in any modes, touch the “ ⏻ ” ICON to switch the unit off . The monitor will draw in automatically .

## 3. ⬅➡ Button

touch this range to adjust the angle of monitor until your desired angle .

## RADIO MODE

Touch the RADIO ICON in home menu to enter the RADIO mode:

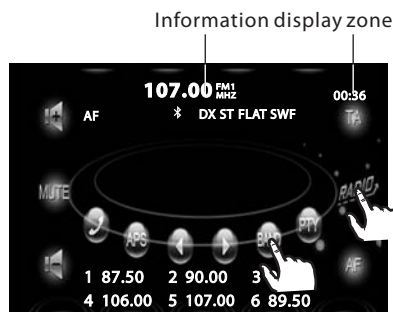

(touch the *RADIO* icon to confirm and to return to previous menu .)

## Selecting The Frequency Band

Touch the screen of “ **BAND** ” section repeatedly to select the band , the message will show in turn :

FM1 → FM2 → FM3  
↑ ↓  
AM2(MW2) ← AM1(MW1)

## Start Searching For a Station

### Manual Search

During Radio mode, briefly touch the screen of “ ▶ ” section to increase frequency by one step of channel spacing .

Briefly touch the “ ◀ ” section to decrease frequency by one step of channel spacing .


### Automatic Search

During Radio mode, touch and hold (for more than 2's ) the screen of “ ◀ / ▶ ” section to start search for a radio station automatically .

## When an FM stereo broadcast is hard to receive

Press **ST/MO** button on the remote control to select the MONO or STEREO mode . (When Stereo mode is activated, the ST symbol will appear .)

## To tune in strong-signal FM Station only (LO/DX function)

In Radio mode, touch the “ *RADIO* ”icon to enter the home menu, and touch the “  ” range to enter into the setting mode .  
the message will display as below :


# Touch Screen Operation



Touch the “Sound” section on the setting menu, touch the “▼ / ▲” ranges to select the “Radio L/D” item, touch the “◀ / ▶” ranges to choose between the LOC and DX mode of Local and Long-distance traffic news .

## Storing Stations In Memory

### Setting Memory

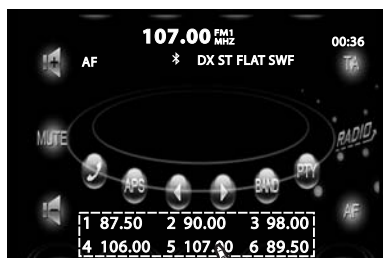

With this system, a total of 30 stations can be stored in the memory of six buttons. Each band stores up to six preset stations. The stations might be FM1, FM2, FM3, AM1(MW1), and AM2(MW2) band.

The operation is as below :

### - Store in Memory

- >Select the frequency band .
- >Select the station .
- >Keep the desired memory key pressed in until the station is heard again after a brief interruption .

### - Retrieve a preset station

Touch the 1-6 ranges briefly to retrieve a station which had been stored in the memory in advance the chose number is shown on display .

## Automatic Memory Storing & Program Scanning

### Automatic Preset Setup


In Radio Mode, touch and keep (for more than 2 'S) the screen of “APS” range to active automatic station storage.


The radio searches within the current frequency band, e.g. FM1, for the stronger signal level until the search cycle has finished . The six strongest stations are then allocated to the corresponding storage locations . Then the station of the first storage location is set .

### Scan Function

In Radio mode, briefly touch the “APS” section on the touch screen , the radio briefly plays all the preset stations of the frequency band .

## RDS FUNCTION

In Radio mode, touch the “RADIO” ICON to enter the main menu, then touch the “ ” ICON to enter the set mode, message in the display : (only in the “TA ON” mode. )

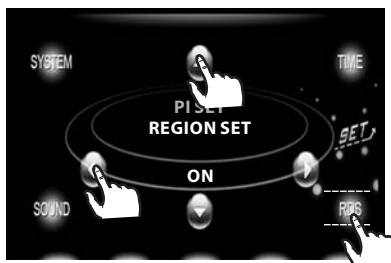

# Touch Screen Operation

---

Touch the “**RDS**” section on the setting menu, touch the “**▼ / ▲**” ranges to select the adjustment item, touch the “**◀ / ▶**” ranges to adjust the selectment item , It’s depend on your need to select the different function .

## **ADJUSTABLE ITEMS:**

### **REGION SET**

Touch to switch the REGION function ON and OFF .

### **PI SET**

Touch to change between PI MUTE and PI SOUND .

### **REG FUNCTION**

at certain times some stations divide up their programs into regional programs with varying content .

**REG ON :** the message “REG ON” will appears in the display for a few seconds .

Note :

- the display capacity is limited . It is possible that in the double display mode some segments of the display are deleted .
- the function REG ON prevents the radio from switching to alternative frequency which have a diferent regional program content .

**REG OFF :** the program identification (PI) of the regional program is ignored during the search for an alternative frequency (AF) or a program identification (PI) .

### **PI MUTE / PI SOUND**

**(only for radio operation)**

if you are in an area where two program identifications (PI) overlap, you can select the option **PI SOUND** and **PI MUTE** for playback of the sound. Alternate switching of the program identification should be avoided .

### **PI SOUND :**

if switching nevertheless occurs the sound of another station is heard for less than one second .

### **PI MUTE :**

the sound of another station is suppressed .

### **TA Traffic Announcement**

**(Priority For Traffic Information)**

In Radio mode, touch the cursor button to switch the TA function ON and OFF . When the TA function is activated, the TA symbol appears in the display . During radio operation in one FM frequency band the search for a traffic announcement station is started automatically (TA SEEK) . If an FM station is being received which transmits the latest traffic announcements from time to time, the TP display lights up.

When the TA function is switched on , the FM traffic automatically interrupt CD operation (the word **TRAFFIC** appears in the display).

The volume level is increased to the minimum value for the transmission of traffic announcements.

After the traffic announcements has finished, the program that was previously running is resumed.

### **Interruption of the TA Function:**

if you would like to interrupt the current traffic announcement, touch the TA section on screen briefly . This does switch off the TA mode .

# Touch Screen Operation

## AF FUNCTION

### (Alternative Frequencies)

In Radio mode, touch the cursor button to switch the AF function ON and OFF .

AF is a function that works with the help of RDS (Radio Data System) and can only be used with FM stations . The radio searches in the background for the best frequency reception of the station that has been tuned into .


Touch the AF section on touch screen or swing and keep the SEL knob in the TA/AF direction for about 2 seconds , the AF function is activated. The AF symbol appears in the display .

When the AF function has been switched on, the radio continuously tests the signal strength of the AF frequency . The test interval for each AF frequency depends on the signal strength of the current station and varies from a few minutes in the case of weak signals. Whenever the new AF frequency is stronger than the station that is currently tuned in , the radio switched to this frequency for a short time for a short time and the message "NEW FREQUENCY " is displayed for one or two seconds.

### **Note :**

the status of the AF function is shown by an AF symbol in the display.

- If the AF symbol appears in the display, the AF function is switched on and RDS transmission date is being received .
- If the AF symbol flashes in the display, the AF function is selected but no RDS signal can be received at the moment .

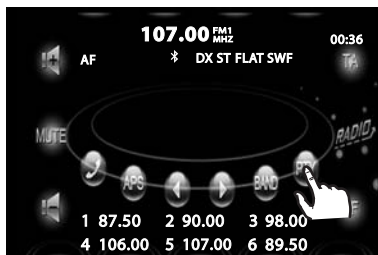

## PTY Selection of the program type

besides the stations name, some FM stations also transmit information on the type of program. This information can be displayed by your car radio .

Examples of such types of program are :

**SPORT NEWS POP WEATHER .....**

With PTY function you can specifically select stations transmitting a particular type of program. Touch the PTY range on screen repeatedly to call up the PTY selection menu . The message "PTY SEEK" then appears briefly in the display .

When PTY has been selected the radio starts searching for corresponding PTY information and stops when the PTY information has been found, "NO PTY" appears in the display. If the PTY information being searched for no longer exists, the PTY function automatically switches to normal mode .

## PTY FUNCTION

In Radio mode, touch screen of "PTY" range to select the Program type .















# Touch Screen Operation

## DVD MODE

In any modes, repeatedly press MOD button on front panel to enter the DVD play mode .

 
The message will display as below :  
(When Parking Brake is applied .)



-  Mute function
-  To decrease the volume level
-  To increase the volume level
-  To enter the main menu
-  Random Function
-  Repeat Function
-  Intro Function
-  Next menu
-  To search fast forward
-  To search fast backward
-  Stop
-  Play/Pause the disc
-  To skip the next track
-  To skip the previous track



To search the disc with numbers



In DVD mode, touch to display the root menu. In VCD mode, touch to switch the PBC ON and PBC OFF.



To select the viewing angle



To show/hide the Subtitle  
(depending on the DVD)



To change the AUDIO setting  
(depending on the DVD)



ZOOM IN and OUT



Redialing



Registering Devices With One  
Another. In bluetooth mode, touch  
to call up the bluetooth menu .



To display the SETUP menu



To select the Equalizer mode



On screen- display



To show / hide the clock



Loudness Function



Subwoofer Function



Switching on and off an Alterna-  
tive frequency



Turning pre-switching for traffic  
announcements on and off






Previous menu



# Touch Screen Operation

## BASIC OPERATION




### Stopping Play

 Touch the screen the  range to stop the unit playback. touch the  range to start play.

### Pause (still picture)

 Touch the “ ” section on touch screen during playback will stop play temporary, touch it again to return the normal playback .




### Rapid Forward/Rapid Reverse

 During DISC playback, touch the screen of “ /  ” range the speed of rapid forward/reverse changes according to the disc as follow:

### DVD/VCD/CD/MP3:

Normal Playback 2x → 4x → 8x → 20x

### Skipping Track


 During DISC playback, Touch the  /  section on the touch screen to skip to next/back one track.



### Note :

For some VCD2.0 disc (PBC-playback control), above these buttons may be unavailable .

### Zoom Function

 Repeatedly touch it button, the displaying rate can be “**zoom 2, zoom 3, zoom 4, zoom ½, zoom 1/3, zoom 1/4, zoom off.**”

Use the direction keys (▲ / ▼ / ◀ / ▶ on remote control to move the enlarged picture .

### Note:


when the JPEG disc playback, in normal mode, you can use the cursor buttons to rotate the picture .  
Press UP to invert an image .  
Press DOWN to mirror an image .  
Press LEFT to rotate an image to left .  
Press RIGHT to rotate an image to right .

## SELECTING THE PLAY MODES

During the Disc playback, touch the “RPT, RDM, INT” range to select the different playing mode .


### 1). REPEAT FUNCTION

#### FOR DVD :

Touch the screen the of “ ” range (or press longer **2/REPEAT** button on the remote control) to select REPEAT mode as follow :



#### FOR VCD/CD/MP3 :


Touch the screen the of “ ” range (or press longer **2/REPEAT** button on the remote control) to select REPEAT mode as follow :



1. Continuously repeat at the current chapter/track, when selected REP-ONE mode .
2. Select REP-ALL mode to continuously repeat all chapter/track on the current disc .

### 2). INTRO FUNCTION


#### FOR CD :


Touch the screen of the “ ” section (or longer press **3/INTRO** button on the remote control ) to play the previous 10 seconds part of each track/chapter on disc.  
(Touch it again to cancel this mode)



# Touch Screen Operation

## FOR VCD :

Touch the screen of the “” section (or longer press **3/INTRO** button on the remote control ). It display will following menu as below :

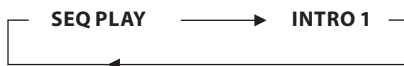


Note: when select the **INTRO** Mode, this player to start to play the previous 10 seconds part of each track/chapter on disc. (Touch it again to cancel this mode .)

## FOR DVD/MP3 :


For DVD/MP3 , press the INT button is not available .

## 3). RDM(RANDOM) FUNCTION

During DISC playback, touch screen of “” section ( press the **4/RANDOM** button longer on the remote control to play in random. Each playing, the order is different . (Depend on the disc used for VCD).

Touch it again to cancel this function .

## TOP/RPT/INT/RDM FUNCTION (Only for the RC.)

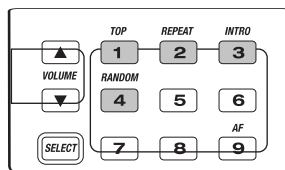

### TOP function

For DVD/VCD/CD/MP3:

In the state of DVD/VCD/CD/MP3 disc playing, press the button to select the first track/chapter to play.(depend on the disc used for VCD)

### REPEAT function

Refer to see page 23 .

## INTRO function

Refer to see page 23 .


## RANDOM function

Refer to see page 24 .

## DISC Search (GOTO)

### FOR DVD :


Touch the screen the of “**GOTO**” range the screen will display the following message :

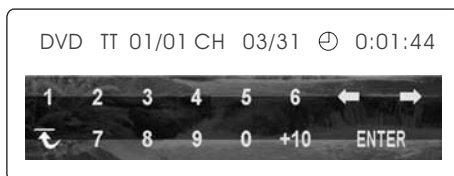

Touch the **← / →** to select the your adjustment item, then select the item you want to watch through CHAPTER/ TIME setting by touching the numeric buttons , then touch the ENTER button to confirm .

### FOR VCD (With PBC OFF):

Touch the screen the of “**GOTO**” range , the screen will display the following message :

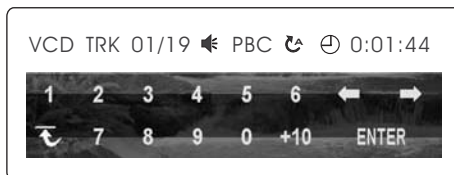

Touch the **← / →** to select the your adjustment item, then select the item you want to watch through TRACK/TIME setting by touching the numeric buttons , then touch the ENTER button to confirm .

# Touch Screen Operation

## ON-SCREEN DISPLAY FUNCTION

OSD



During playback, touch the screen of the OSD section, it will display the following as below :

1. DVD:

A.Touch or Press **OSD** for first time:

DVD TT 01/01CH 04/31 C 0:02:06

Title Number, Total Title Number, Chapter Number, Total Chapter Number of this Title of the disc currently being played will be shown on the screen, along with the elapsed time.

B.Touch or Press **OSD** for second time:

⏮ ½ ENG ■■ 2CH ■ OFF 🔊 OFF

C.Touch or Press **OSD** for third time:

DVD TT 01/01CH 04/31 C -0:01:32

D.Touch or Press **OSD** for fourth time:

DVD TT 01/01CH 04/31 T 0:16:00

E.Touch or Press **OSD** for fifth time:

DVD TT 01/01CH 04/31 T -1:36:55

F.Touch or Press **OSD** for sixth time:  
The message on the screen will be cleared.

2.Example for VCD/SVCD/CD:

A.Touch or Press **OSD** for first time:

VCD TRK 1/19 🔊 PBC 🔊 C 0:01:36

B.Touch or Press **OSD** for second time:

VCD TRK 1/19 🔊 PBC 🔊 C -0:06:06

C.Touch or Press **OSD** for third time:

VCD TRK 1/19 🔊 PBC 🔊 T 0:02:12

D.Touch or Press **OSD** for fourth time:

VCD TRK 1/19 🔊 PBC 🔊 T -1:23:06

E.Touch or Press **OSD** for the fifth time:  
The message on the screen will be cleared for SVCD and VCD.

### **NOTE:**

For CD(audio) Disc, touch OSD button is not available .

3. Example for MP3

A.Touch or Press **OSD** for first time:

CDrom TRK 2/76 🔊 🔊 C 0:00:36

B.Touch or Press **OSD** for second time:

CDrom TRK 2/76 🔊 🔊 C 0:03:38

C.Touch or Press **OSD** for third time:  
The message on the screen will be cleared.

# Touch Screen Operation

## DVD/VCD Special Function

### 1. Multi-subtitle Language Function (for DVD Only)



During DVD playback. Touch the **SUBTITLE** section on touch screen (or press the SUBTITLE on the remote) .

Each time the button is pressed or touch, number of the subtitle language changes in sequential order.

#### Notes:

- The language number is different according to the disc.
- Some discs only contain one subtitle language.
- When no different subtitle language are recorded, "**INVALID KEY**" will be displayed at screen left top corner.

### 2. Multi-Audio Language Function



#### For DVD:

During DVD playback , touch the **AUDIO** section on touch screen (or press the AUDIO

on the remote .) Each time the button is pressed or touch , number of the audio soundtrack language changes on sequential order.

#### Notes:

- The language number is different according to the disc.
- Some disc only contain one language soundtrack
- When no different language soundtrack are recorded "**INVALID KEY**" will be display at screen left top corner.


#### For VCD/CD:

during playback, touch the **AUDIO** section of the touch screen or Press **AUDIO** on the remote . It is possible to switch the sound between monaural and stereo sound.



### 3. Multi-Angle Function (for DVD Only)



During DVD playback, touch the **ANGLE** (  ) button on the touch screen .

Each time the button is pressed , the number of the angle changes in sequential order.

#### Notes:

- The angle number is different according to the disc.
- The function only work for disc having scenes recorded at different angles.
- When no different angle are recorded, "**INVALID KEY**" will be displayed at screen left top corner.

### 4. Title Menu Function

#### For DVD:

If the DVD has multiple titles recorded on the disc. It can select preferred title from the title menu to start playback.

- During DVD playback, press **TITLE** button on the remote .The title menu is display.
- Select preferred title by the cursor button and confirmed by press the **ENTER** button .


#### For VCD:


Press **TITLE/PBC** button on the remote control while the disc is playing, you can switch between "PBC ON" and "PBC off" mode.

# Touch Screen Operation

## DVD SETUP

### USING THE MENU

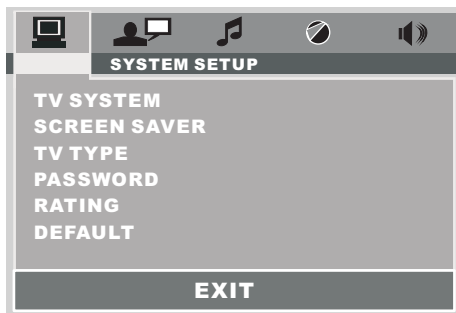


1. Touch the screen of "  " range or press the **SETUP** button on remote .
2. The SETUP menu is displayed.
3. Touch directly the desired item to select the preferred item .  
Or by using the ► /◀ /▼ /▲ buttons .
4. Touch the **EXIT** section to clear the setup menu or press the **SETUP** on the remote control .

### Overview Of The Main Menu




- (1). System Settings
- (2). Language Settings
- (3). Audio Settings
- (4). Video Settings
- (5). Digital Settings

## SYSTEM SETUP

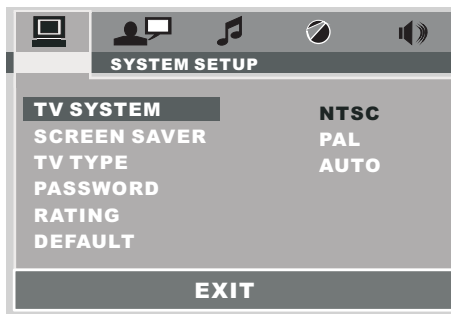

### TV TYPE SETUP




This player is capable of playing discs recorded in either PAL or NTSC formats. Make the selection based on whether you are connecting the unit to a PAL TV or an NTSC TV. You can also set the unit to AUTO (autoselect). The disadvantage to autoselect is that each time you turn the unit on it checks to see what kind of monitor is connected, which causes a small delay and some flickering of the display image which you may find unpleasant.

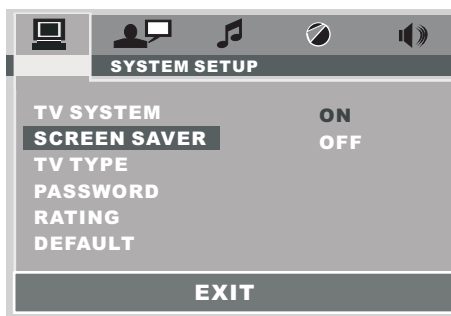

### SCREEN SAVER SETUP

If the screen displays a static image for too long, some "burn-in" may occur, leaving a permanent trace of the image behind. To avoid this, turn ON the SCREENSAVER item. After a short period of inactivity on the monitor, the unit will substitute a moving image to avoid burn-in.

# Touch Screen Operation

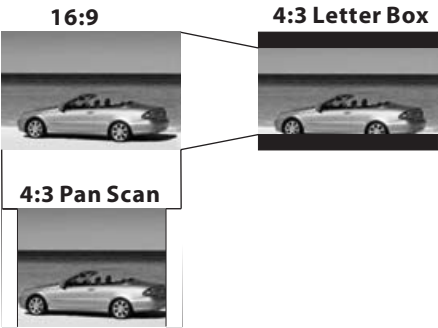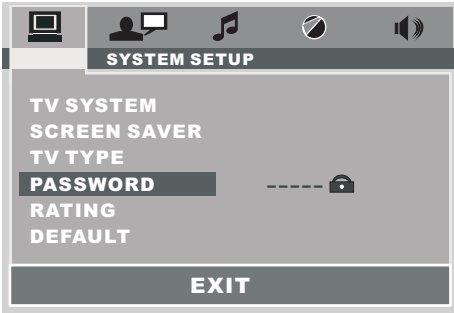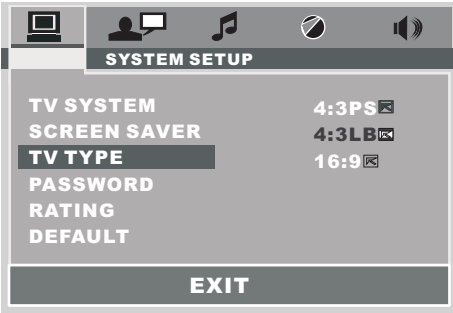

## TV DISPLAY SETUP

This is to select the appropriate TV aspect (4:3 or 16:9) according to the connected TV set.

### Normal/PS (For 4:3 TV)

Played back in the PAN & SCAN style.  
(If connected to wide-screen TV, the left and right edges are cut off.)

### Normal/LB (For 4:3 TV)


Played back in LETTER BOX style.  
(If connected to wide-screen TV, black bands appear at top and bottom of the screen.)

### Wide (For 16:9 TV)

Select when a wide-screen TV set is connected.

## PASSWORD SELECTION


The password must be used to make changes to the Parental Control menu below . The factory default password is **0000**. You will be asked for the current password. Key in **"0000"** and then press the ENTER button on the remote control. Once you have entered it, you have the opportunity to change it and enter your new password . Then , when you enter the Parental Control menu, you can make any changes.

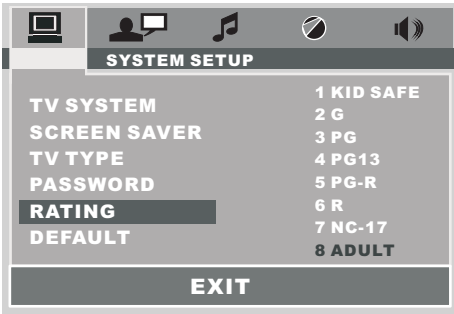

## RATING

Select suitable parental guidance with the cursor buttons and confirm it by pressing the ENTER button.

# Touch Screen Operation

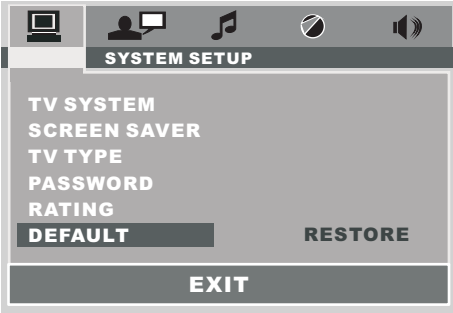

## DEFAULTS

Selecting the DEFAULT item and confirming RESTORE will return ALL personal settings you have made, including radio and TV presets, to the factory default settings.



## AUDIO LANGUAGE SETUP

Select the preferred AUDIO soundtrack language by touching directly the desired language .

## LANGUAGE SETUP



## OSD LANGUAGE SETUP

Select the preferred OSD language by touching directly the desired language .



## SUBTITLE LANGUAGE SETUP

Select the preferred Subtitle language by touching directly the desired language .

# Touch Screen Operation



## DISC MENU LANGUAGE SETUP

Select the preferred DISC MENU language by touching directly the desired language .

## AUDIO SETUP



### AUDIO SETUP (DIGITAL OUT)

your DVD player can be connected to a home theater system with a coaxial digital audio jack for high quality sound . Digital audio output allows you to select SPDIF/RAW or SPDIF/PCM digital signal .

#### A. SPDIF/RAW

the coaxial output is connected to a receiver that accepts Dolby Digital or other signals. It works for most of the coaxial connections .

#### B. SPDIF/PCM


the coaxial output is connected to a receiver that accepts PCM SIGNALS .

## VIDEO SETUP

these settings allow you to set the video signal brightness, contrast, hue, and saturation .




**BRIGHTNESS**- the brightness of the video signal (how light the picture is) .

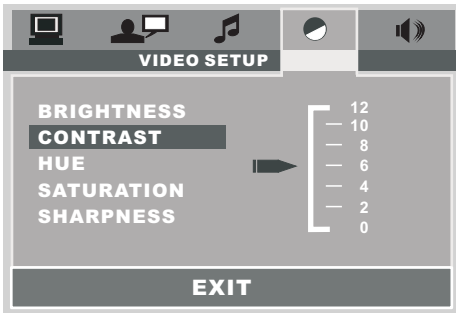


**CONTRAST**- the contrast of the video signal (the dark portions of pictures).

# Touch Screen Operation

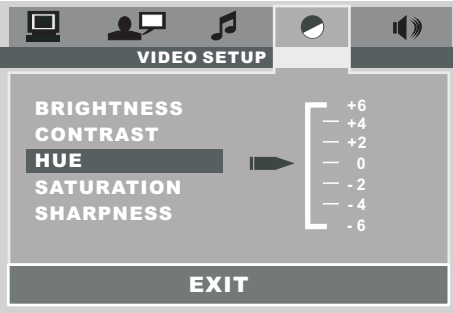


**HUE**- the hue of the video signal (the color of the pictures) .

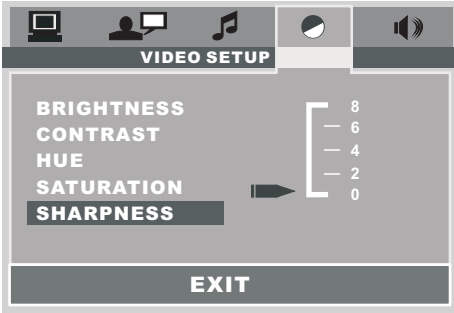


**SHARPNESS**- the sharpness of the video signal (the image setting acumination) .

## DIGITAL SETUP

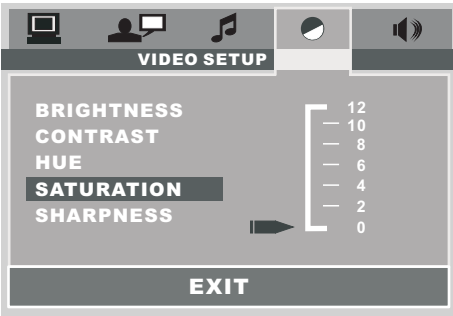

**SATURATION**- the saturation of the video signal (the vividness of the color) all above can be adjusted to your tasters .

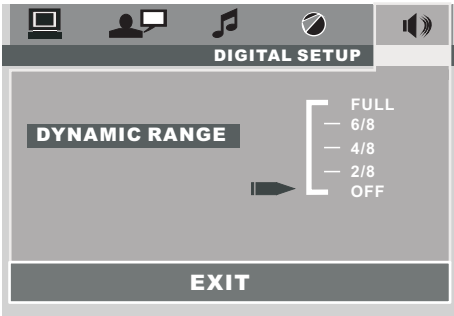

**DYNAMIC RANGE CONTROL**  
Select DRC and adjust the dynamic range of a Dolby Digital encoded program. There are 8 steps between full compression and off compression.




# Touch Screen Operation

## AUX Operation

On the front panel of this unit, there is an AUX IN jack, follow the diagram below to connect analogue replay devices(only for the Audio connect, if you want to connect the Video, please plug the RCA <Video input > on the back of the unit .) . Use this jack to replay sound of other replay equipment such as DVD players, computers, etc. Via the loudspeakers.

1). Please connect the external device with stereo jack plug the Aux in socket .


### AUX IN JACK IN PANEL

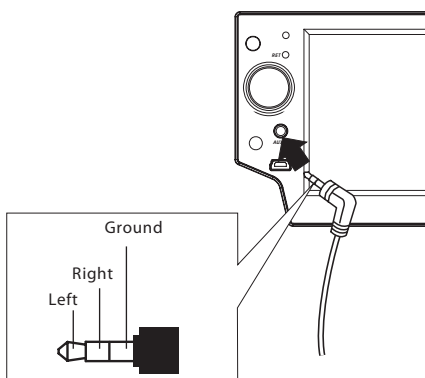

#### **Note:**

the unit is only support the 3.5 mm A/V Jack Pin Assignment shown as the diagram .

2). In any mode, touch the “ MOD ” range repeatedly select the AUX mode.  
(Or in home menu, touch the AUX icon to enter the AUX mode .)

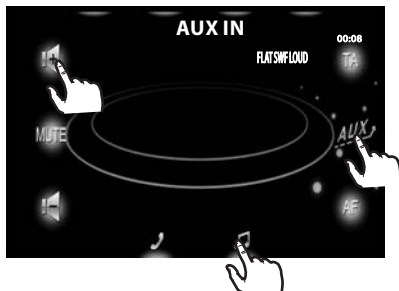

3). You now hear the sound from the external device played back through the loudspeakers .

4). Touch the volume +/- sections on touch screen or use the VOL +/- on the panel to adjust the volume level.

# Touch Screen Operation

## BLUETOOTH OPERATION





### 1. “Pair” To Your Bluetooth Phone

Prior to using the Car Kit for the first time, you must pair it with a Bluetooth-enabled mobile handset.

The following steps describes pairing the instruction for a typical Bluetooth-enabled mobile handset.

#### 1). Place the Car Kit and mobile handset in 3 meters apart.

#### 2). Put the Car Kit in pairing mode.

- Press the **POWER** button to turn ON, the  ICON will flash on TFT .
- Touch the screen of “  ” section or press longer the “**PAIR/** ” on the remote control until the word “  ” icon flashing , it’s now ready for pairing.

#### 3). Set your bluetooth phone to “discover” the Car Kit .

Following your phone's instruction guide for details, active your mobile handset's Bluetooth function, the handset will search for accessible Bluetooth devices.



#### 4). Your phone will find this Car Kit .

Select this Car Kit from the list.

#### 5). Enter passkey “8888”, then press “OK” to pair the Car Kit and the handset .

#### 6). Select the “CONNECT” from the list on the phone, if you connect successfully , the ICON remains solid on the screen , then you can operate the function of blue-tooth about the unite .


 
## IMPORTANT:


- If the pairing can not be completed within approximately 2 minutes , while the pairing mode is activated, and you will need to reattempt pairing (See steps 2-5 above) .
- After pairing is completed, if the  ICON is stilling flash on the TFT , please follow the steps to reattempt pairing through your handset until the  ICON remains solid on the screen.



## 2. Using The Bluetooth Car Kit.





Once connecting is complete, you may access the following function. Some of the below mentioned functions only accessible for handset supported with hands-free profile.
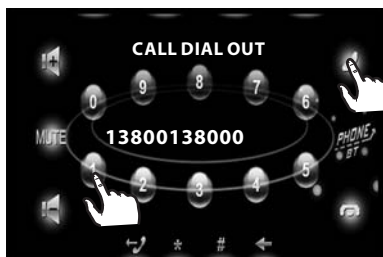
## MAKE A CALL

Touch the screen of “  ” section , the dial numbers will display on the monitor . then you can touch the number section on screen , and then touch the “  ” section to call .



 
**Note:** When you dial the wrong number, you can touch the screen of “  ” to delete the wrong number . (You can also press the “  ” button on the remote control to do so .)

**Please note :** “” and “” serves as the “” and “” button on your mobile handset .

# Touch Screen Operation

## ANSWER A CALL

After you hear the ring tone, a incoming telephone number will display on the TFT monitor . Touch the screen of “☎” range to listen or press the “PAIR/☎” button shortly on the remote control .

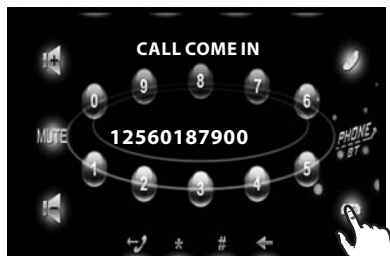

## CALL TRANSFER

During talking mode , user can touch the screen of the “☎” range (or press the “PAIR/☎” button on remote control ) to transfer the audio from the unit back to the mobile phone for privacy reason .

## END/REJECT A CALL

In Bluetooth menu, touch the screen of “☎” range (or press briefly “BND/☎” button on remote control) .

## REDIAL LAST NUMBER


In Bluetooth menu, touch “☎” range (or press longer “ BND/☎ ” button on the remote control the “DIAL LAST CALL /DIAL OUT NOW ” will display on the TFT monitor .

## ADJUST THE VOLUME

During conversation in progress, tune the Volume switch until you reach the desired volume level.

## PLAY BT MUSIC

In Bluetooth mode, repeatedly the MOD on the panel to select the “BT MUSIC” Mode . The message will display like following as below :

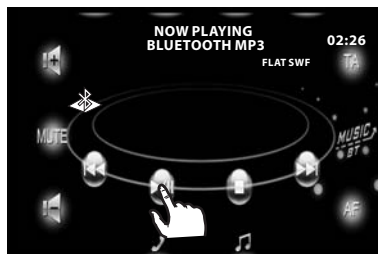

### Note:

please make sure it support the Bluetooth **A2DP & AVRCP** profile.

### Note:


- 1). Before using the function of the Bluetooth about the unit , please check your phone's instruction guide or contact phone manufacture if you are not sure if your phone supports the hands-free Bluetooth function .
- 2). When operating the function of blue-tooth about the unit , you need make your call-phone and the unit successfully for one time. Afterwards, you only need to take on the power and the function of blue-tooth will work in three minutes automatically if you want to operate the function of blue-tooth .
- 3). If you want not to use the function of the Blue-tooth about the unit , you can select the Bluetooth OFF .

# Touch Screen Operation

## USB Operation


(USB Storage Capacity : 8GB)

Following the diagram below, connect your USB device by USB connect cable to the front panel USB port .

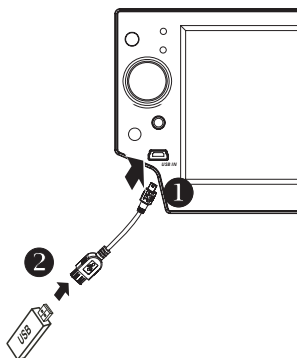

If it is properly connected, the device will be mounted and start playing automatically. The information like following :

### 1. MP3/WMA file operations

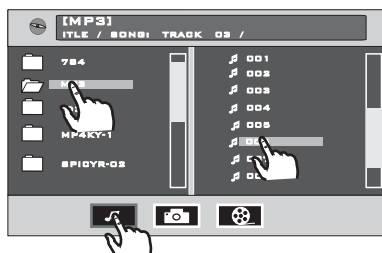


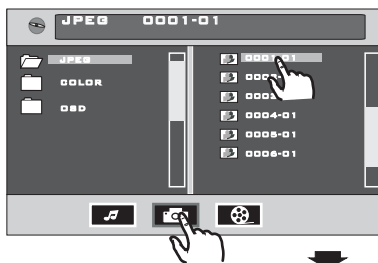
## File Playback Operation

All the playback operation function is same as the operation on CD/MP3 play .



(User can use your finger to touch directly the desired track to start play)

### 2. JPEG file operations


 
In USB playback mode, you can touch directly the “” icon to choose JPEG mode, the message will display as below :





#### 1). Selecting other file

touch or press the “ / ” once while viewing a picture to advance to the next /previous file . (You can touch directly you desired picture to start play .)

#### 2). To flip the picture

press the “ / ” while viewing a picture to flip the picture horizontally or vertically.

#### 3). To rotate picture

press “ / ” while showing a picture to rotate the picture clockwise or counter clockwise .

#### 4). To stop viewing at any time, press stop


the JPEG menu appear, you can choose other item .



# Touch Screen Operation

---

## 3. MOVIE or MPEG4 file operations

In USB playback mode, you can touch directly touch the “” icon to choose movie mode, the message will display as below :






## File Playback Operation




All the playback operation function is same as the operation on DVD play .

(User can use your finger to touch directly the desired track to start play)

## Changing From USB to DISC or SD card Playback modes

If you are in USB Playback mode and wish to begin playback of a disc already in the player, touch the screen of the “” range to enter the home menu, then touch the “” (DVD) or “” SD ICON to enter the DISC or SD mode .

## Changing From DISC to USB or SD card Playback Mode

If the disc present in the player is an DVD or VCD or MP3/WMA or MP4 disc, touch the screen of the “” range to enter the home menu, then touch the “” (USB) ICON or “” (SD) to enter the USB or SD mode .

## IMPORTANT NOTE:

1. To prevent damage to the USB device, do not remove or disconnect it during playback. it is also a good practice to remove the USB drive during disc playback.

# Touch Screen Operation

## **SD/MMC card OPERATION**

(SD/MMC Storage Capacity : 8GB)

The unit can support playback MP3/WMA /JPEG/MP4 and Divx format which are stored into SD and MMC memory card . Please read below before you start the operation of memory card .


### **Inserting the SD or MMC card .**

①



Insert the memory card into slot with label side facing frontward .


②

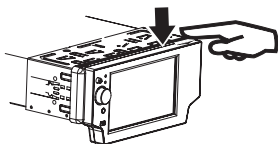

Press in till heard a "CLICK" .


### **Removing the SD or MMC card .**

①

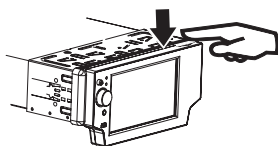

Press in till heard a "CLICK" .

②

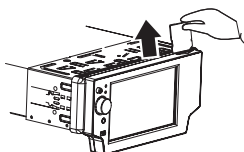

Remove the memory card .

## **MODE CHANGE TO SD/MMC CARD**

After a SD or MMC card was inserted into the main unit card slot . The unit will starts playing the files contained on the memory card .

Once the unit read the memory card successfully, the first file on the memory card will automatically start play back . Press the mode button repeatedly is allowing changing to other modes .

## **FILE PLAYBACK OPERATION**

### **1. MP3/WMA file operations**

All the SD or MMC memory car playback operation function is same as the operation on **CD/MP3/WMA** .

Please see "**MP3/WMA**" operation for more details .

### **2. JPEG file operations**

All the playback operation function is same as the operation on USB play .

### **3. MOVIE or MPEG4 file operations**

All the playback operation function is same as the operation on USB play .

## **CHANGE DISC TO SD/MMC CARD**

The operations are same as USB mode, refer to see USB operation .


## **CHANGE SD/MMC CARD TO DISC**

The operations are same as USB mode, refer to see USB operation .

# Touch Screen Operation

## MP3/WMA/JPEG/MPEG4 DISC PLAY

The unit is support MP3/WMA/JPEG/MPEG4 . When a disc is inserted into player, the following picture will appear on the monitor . The unit will play the first track automatically . You can touch to directly others mode (MP3/JPEG /MPEG4) to play .  
EX. : when the MP3 mode is selected .

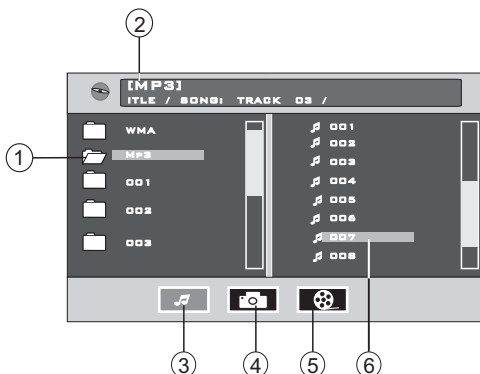

- 1 Current type (highlighted bar) .
- 2 Current track (ID3 TAG display) .
- 3 The current play mode(MP3).
- 4 Select the play mode(JPEG).
- 5 Select the play mode(MPEG4).
- 6 Current song in MP3 folder .

Touch directly to select the play mode and then touch the desired track to play .  
Or Use ▲ / ▼ / ► / ◀ on the remote control to select the play mode or item, then press **ENTER** button on the remote control to confirm.

### **MOVING TO ANOTHER TRACK :**

1. Touch directly the desired song to start play .
2. Touch the ►► or ◀◀ range on the touch screen to skip a track ahead or back.
3. Press the ►► or ◀◀ button on the remote control to skip a track ahead or back.

### **FAST FORWARD/FAST BACKWARD**

1. Touch briefly the “►► / ◀◀” range on touch screen for fast forward / fast backward.
2. Press shortly the ►► or ◀◀ button on the remote control for forward or backward .

### **REPEAT FUNCTION**

Touch the screen of “**REPEAT**” range or press longer “**2/RPT**” on the remote control repeatedly can select two kinds of repeat play mode.

#### **REP-ONE:**

Play the same song over and over again.

#### **REP ALL:**

Play all songs on the disc, then repeats the entire disc over and over again .

#### **NOTE:**

in JPEG/MPEG4 mode, the details operations as same as MP3/WMA operation .

# Specification

---

## GENERAL :

Supply Voltage:	12V DC (11V-15V)	
Current Consumption:	Less than 10 A	
Signal System:	Compositive video 1.0Vp-p 75 Ω	
Discs Played:	(1)DVD-VIDEO Disc	
	5"(12 cm) single-sided, single-layer	
	5"(12 cm) single-sided, double-layer	
	(2)Compact Disc (CD-DA, VIDEO CD)	
	5"(12cm) disc	
Audio Signal Output:	2ch&4ch line out	
Characteristics:	(1)Frequency Response	20 Hz - 20 KHz
	(2)S/N Ratio	90 dB (JIS)
	(3)Wow and Flutter	Below measurable limits

## RADIO SECTION:

	For 3 Bands (Europe) FM	For 2 Bands (Europe) FM	For 2 Bands (U.S.A.) FM
Frequency Coverage:	87.5 to 108 MHz	87.5 to 108 MHz	87.5 to 107.9 MHz
IF:	10.7 MHz	10.7 MHz	10.7 MHz
Sensitivity (S/N = 30 dB):	15 dBu	15 dBu	15dBu
	MW	MW	AM
Frequency Coverage:	522 to 1620 KHz	522 to 1620 KHz	530 to 1710 KHz
IF:	450 KHz	450 KHz	450 KHz
Sensitivity (S/N = 20 dB):	40 dBu	40 dBu	40 dBu

## TFT MONITOR:

Monitor Screen Size:	5 Inch Wide
Resolution:	1440 X 234 pixels
Color System:	NTSC/PAL

## BLUETOOTH:

Bluetooth specification:	V1.2 Class 2
Bluetooth profile supported:	Headset, Handsfree and A2DP & AVRCP profiles
Range of frequency:	2.4GHz Spectrum

## NOTE:

Specifications and design are subject to modification, without notice, due to improvements in technology.



# Trouble Shooting

Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer.

SYMPTOM	CAUSE	SOLUTION
No power	The car ignition switch is not on	If the power supply is properly connected to the car accessory terminal, switch the ignition key to "ACC"
	The fuse is blown	Replace the fuse
Disc can not be loaded or ejected	Presence of disc inside the player.	Remove the disc in the player, then put a new one
	Inserting the disc in reverse direction	Insert the compact disc with the label facing upward
	The disc is extremely dirty or defective	Clean the disc or try to play a new one
	Temperature inside the car is too high	Cool off or until the ambient temperature return to normal
Television/video image appears black-white	The color system is set incorrectly	Please switch to correct color system from menu
No television/video image appears	The unit is not connected to the parking brake detection switch	Make proper connection according to "wire connection"
	The parking brake is not engaged	For safety reasons no television /video images are displayed while the vehicle is moving. Engaging the parking brake will cause images to be displayed.
No color in picture	The disc format is not according to the TV-set used (PAL/NTSC)	Please the television mode of the choice accommodation
JPEG disc can not be played back	No JPEG files are recorded on the disc.	Change the disc
	JPEG files are not recorded in a compliant format	Change the disc Record JPEG files using a compliant application
The operation keys do not work	The built-in microcomputer is not operating properly due to noise	Press the RESET button. Front panel is not properly fixed into its place
The radio does not work	The antenna cable is not connected	Insert the antenna cable firmly
	The signals are too weak	Select a station manually