

TEL: 805.983.8008  
3451 LUNAR COURT  
OXNARD, CA 93030  
WWW.SOUNDSTORMLAB.COM

**SOUND STORM**<sup>®</sup>  
LABORATORIES



**SOUND STORM**<sup>®</sup>  
LABORATORIES

*User's Manual*

**SMP3-100R**

## CONTENTS

Installation .....	2
Wiring Connection .....	4
Operation .....	5
Specification .....	12

## INSTALLATION

 
### PRECAUTIONS

- Choose the mounting location carefully so that the unit will not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.
- Be sure to remove the front panel before installing the unit.

**Mounting angle adjustment**  
Adjust the mounting angle to less than 20°.

### MOUNTING EXAMPLE

Installation in the dashboard

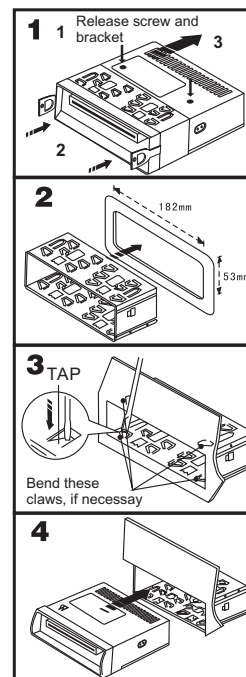


**Note:** Keep the release key in the safe place as you may need it in future to remove the unit from the car.

### Detaching and attaching the front panel

 The front panel of this unit can be detached in order to prevent the unit from being stolen.


### DETACHING THE FRONT PANEL

Before detaching the front panel, be sure to press the PWR button OFF first. Pull out the panel towards you in order to detach completely the panel from the main unit. Refer to instruction.

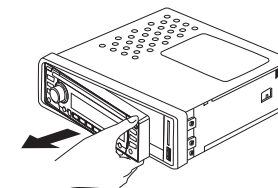

### ATTACHING THE FRONT PANEL

 Make sure the front panel is the right way up when attaching it to the unit as it cannot be attached upside down. Bring side B of panel to side A of main unit. Insert the panel in and push until it clicks. Panel is attached.

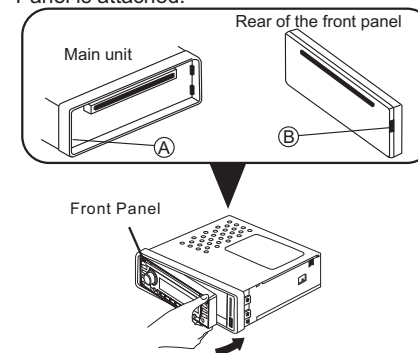


### Notes:

Do not press the front panel hard against the unit when attaching it. It can be easily attached by pressing it lightly against the unit.

When you carry the front panel with you, put it in the supplied front panel case. Do not press hard or give excessive pressure to the display window of the front panel when attaching it to the unit.

## INSTALLATION
 
### TO SUPPORT THE UNIT

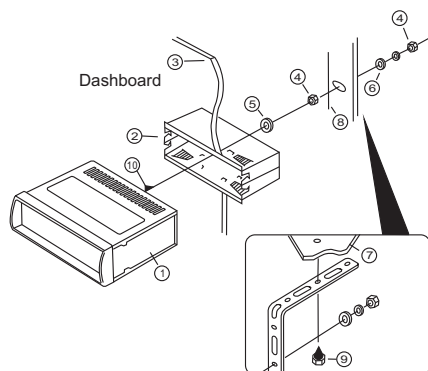

1. UNIT
2. RELEASE CASE
3. DASH BOARD
4. HEX NUT
5. LOCK WASHER
6. PLAIN WASHER
7. CAR BODY
8. REAR SUPPORT STRAP
9. TAPPING SCREW
10. M5 X 15 HEX BOLT

### ISO CONNECTOR

RCA Jack Line Out (Front)

 
- : Red (right)
- : White (left)

Line Out(Rear)

- : Red (right)
- : White (left)

RCA Jack Line In

- : Red (right)
- : White (left)

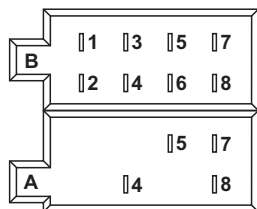

#### CONNECTOR A

4. MEMORY + 12V
5. AUTO ANTENNA OUTPUT
7. +12V (TO IGNITION KEY)
8. GROUND

**Note:** (connector A no. 7) must be connected by car ignition key in order to avoid that car battery becomes weak when the car will be not used for long period.

#### CONNECTOR B

1. REAR RIGHT SPEAKER (+)
2. REAR RIGHT SPEAKER (-)
3. FRONT RIGHT SPEAKER (+)
4. FRONT RIGHT SPEAKER (-)
5. FRONT LEFT SPEAKER (+)
6. FRONT LEFT SPEAKER (-)
7. REAR LEFT SPEAKER (+)
8. REAR LEFT SPEAKER (-)

#### Maintenance

##### FUSE REPLACEMENT

 
If the fuse blows, check the power connector and replace the fuse. If the fuse blows again after the replacement, there may be an internal malfunction. In this case, consult your nearest repairing center.

##### Warning

Use the specified amperage fuse for each lead. Use of a higher amperage fuse may cause serious damage.

## WIRING CONNECTION

### ELECTRICAL CONNECTIONS

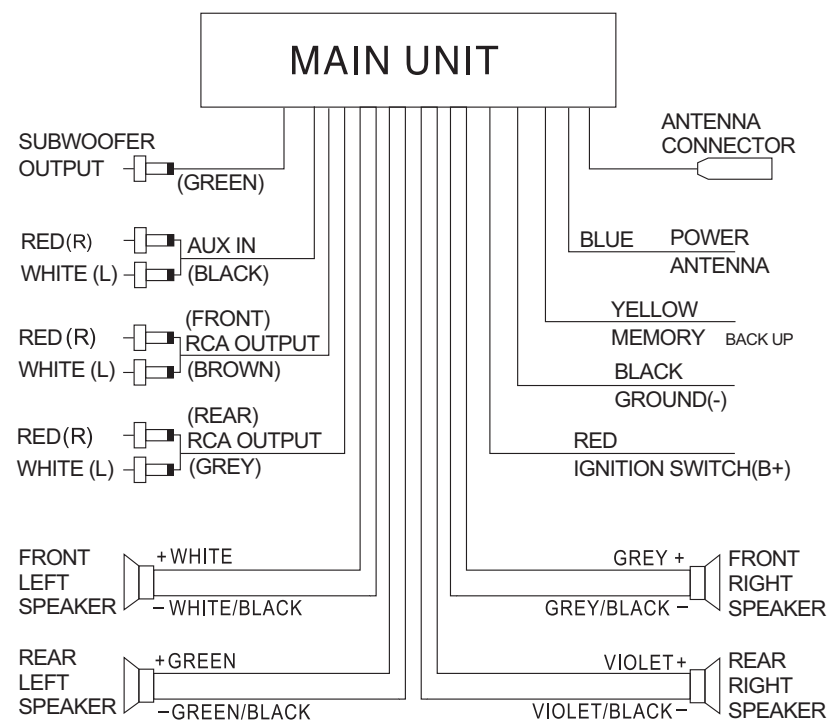

## OPERATION

### GENERAL CONTROLS

#### POWER ON/OFF

By pressing this key, the unit is switched on and off.  
This unit is turned on by pressing any key.

#### PANEL RELEASE BUTTON

 
Press the  button and the right-hand section of the panel will release.

#### BAND SELECTOR SWITCH

Push this switch to select the desired band. Selection is made in regular sequence as FM-AM.

#### 'SCAN' AUTOMATIC TUNING CONTROL



This key is operated as RADIO SCAN. The operation is similar as normal search but different thing is holding 5 seconds on every station detected in RADIO SCAN mode.

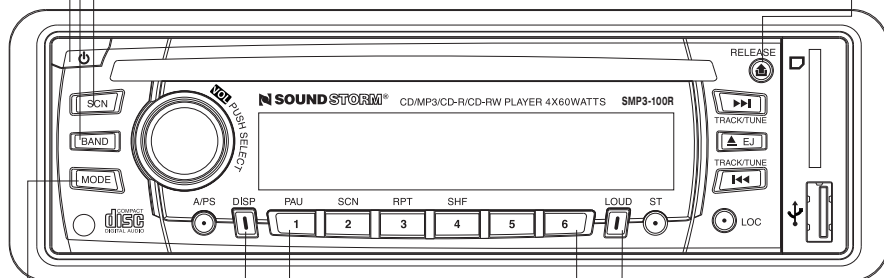

#### DISPLAY BUTTON (Set the Clock)

Selects radio frequency or clock display.

To set the clock:

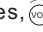1. With clock display selected, hold down (DISP) button until clock display starts flashing.
2. Rotating  to change minutes,  to change hours.
3. Press (DISP) button to start clock.

#### PRESET STATIONS

Six numbered preset button store and recall stations for each band.

##### Storing a station:

1. Select a band (if needed)
2. Select a station
3. Hold a preset button longer than one second. Preset station number appears in the display when station is saved.

##### Recall a station:

1. Select band (if needed)
2. Press a preset button for less than one second to select stored station.

#### MODE BUTTON

By pressing this key, user can select. AUX/TUNER/CD-MP3/USB or MMC/SD mode.

## OPERATION

### GENERAL CONTROLS

#### AUTOMATIC OR MANUAL TUNING (FREQ UP OR FREQ DOWN )

##### (A) RADIO MODE

When pressed for less than 1 second, these keys operate as manual tuning mode. When pressed longer than 1 sec., they are operated as SEEK tuning mode.

If the keys are not pressed for 3 seconds, they will return to SEEK mode again.

##### (B) CD PLAYER MODE

 
When pressed for less than 1 second, they will operate as TRACK UP or TRACK DOWN mode.

When pressed longer than 1 sec., they will operate as CUE or REVIEW mode.

#### LCD DISPLAY

The Liquid Crystal Display will display the current state of the unit.

#### SELECT

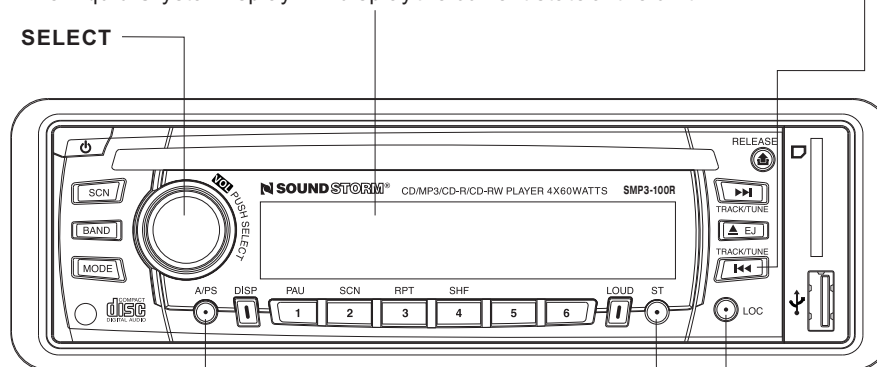

#### STEREO/MONO SELECTOR

This function will only affect the FM reception. Press this button if the FM reception becomes noisy/hissy. If the station being received is in stereo, it will now be played in mono.

Press this button again to return the receiver to normal reception.

#### LOCAL/DISTANT BUTTON

Press Local/Distant (LO/DX) button for listening to weak stations. "LOCAL" indicator will appear on the display. Press this button again (Distant mode) for normal operation.

#### AUTOMATICALLY STORE STATIONS

Select six strong stations and store them in current band.

1. Select a band (if needed)
2. Hold **A/PS** button for more than three seconds. The new stations replace stations already stored in that band.

##### Preset Scan

 
Scan stations stored in current band

1. Select a band (if needed)
2. Touch **A/PS** for more than one second but less than three seconds. Radio pauses for five seconds at each station. Touch **A/PS** again to stop scanning when desired station is reached.



## OPERATION

### VOLUME UP/DOWN

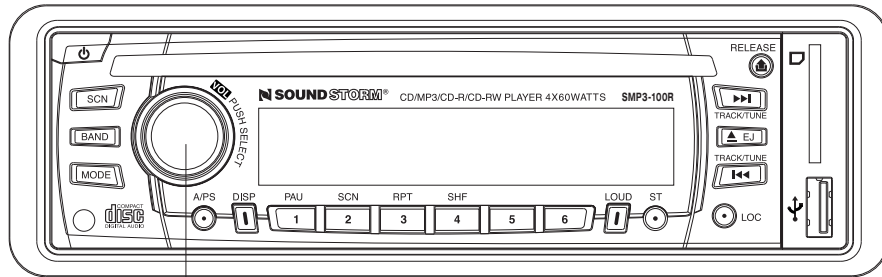

Turning the VOL knob Right or Left, you can adjust VOL/BASS/TREB/BAL/FAD. To select other functions, press the SEL button shortly until the desired functions is shown on the display. Figure 1 shows how control functions are selected using the SEL button.

 


Fig. 1 Selection of sound control functions

1. VOL 2. SEL 3. BAS 4. TRE 5. BAL 6. FAD

Turning the VOL knob Right or Left. Increase or decrease the volume by turning or . These buttons can be used to adjust the BASS, TREBLE, BALANCE and FADER.

### AUDIO DSP CONTROLS (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



### ESP MODE (2)

When press the SEL button for more than 2 seconds, it is activated as 12 sec. or 45 sec. of ESP mode can be selected.



### MULTI CD SECTION MODE (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



CD MULTI ON/OFF mode is selected by or key. CD MULTI ON: Read multi section CD. CD MULTI OFF: Read first section only.

### BEEP MODE (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.

 


BEEP ON: BEEP sound can be heard from speaker when the buttons are pressed.

## OPERATION

### SEEK MODE (2)


When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.

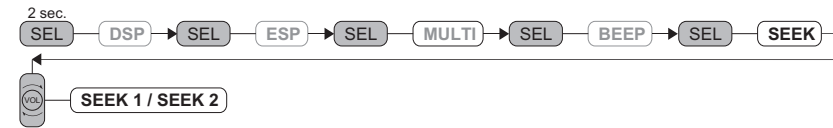

**SEEK 1:** When SEEK 1 mode is activated, AUTO SEEK SCAN is stopped when station is detected even user still push SEEK button.

**SEEK 2:** Auto SEEK SCAN is not stopped even station is detected if user push SEEK button. When release this SEEK button, then stop when station is detected.

### CONTROLS BEHIND FACEPLAYTE

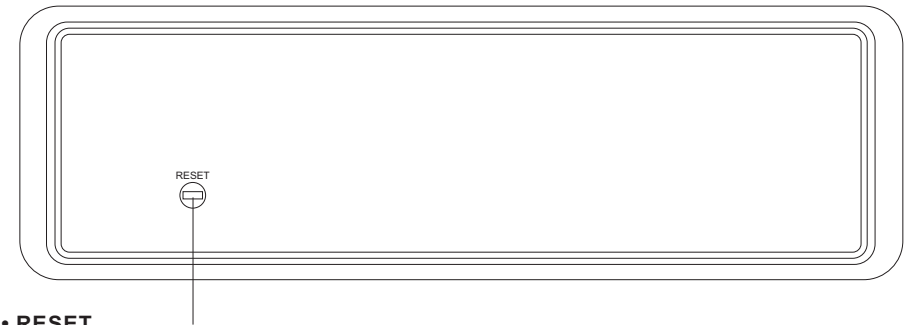 


#### • RESET

- Reset button is placed on the housing.
- The reset button is to be activated for the following reason:
  - Initial installation of the unit when all wiring is completed.
  - All the function button do not operated.
  - Error symbol on the display.

## OPERATION
 
### CD CONTROL LOCATION OF PARTS

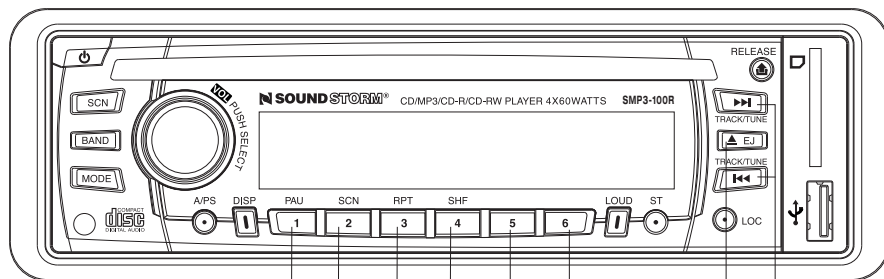

#### PAUSE BUTTON

Press to pause CD playback. Press again to resume playback.

#### INTRO BUTTON (Preview all Tracks) 'INT'

When this button is pressed, 'INTON' indication is displayed and the first several seconds of each track of the disc is played. Press again to stop intro and listen to track.

#### REPEAT BUTTON 'RPT'

When this button is pressed, 'RPT ON' indication is displayed and the selected track will be continually repeated until the Track repeat mode is cancelled by pressing 'RPT' button again.

#### RANDOM BUTTON 'RDM'

When this button is pressed, 'RDM ON' indication is displayed and each track on the disc is played in random order instead of normal progression. To cancel RANDOM mode, press 'RDM' button again.

#### 10 TRACK UP/DOWN SELECT: (In case of MP3 files)

M5: 10 Track down / M6: 10 Track up

#### CD EJECT BUTTON

Press the EJECT button to remove the CD. The receiver will automatically switch to radio mode.

#### TRACK/SEARCH BUTTON

##### FORWARD AND REVERSE TRACK SEARCH

Press and release to advance to next track or to return to the beginning of the current track (track number will be displayed.) Press and hold to fast forward or reverse. Play will begin at the point when you release the button.

## OPERATION

### HOW TO SELECT MP3 FILES

#### 1. Searching Track:

- Press "A/PS", then search track is activated.
- Press "SEL", then the first digit will flash.
- With "VOL" / "VOL" knob, select first digit desired.
- Press "SEL", then the first digit is fixed and second digit will flash.
- With "VOL" / "VOL" knob, select 2'nd 3'rd respectively.
- Then automatically the song selected will start.

 
#### 2. Searching File Name:

- Press "A/PS" twice, then file search is activated.
- Press "SEL", then the first directory is displayed.
- With "VOL" / "VOL" knob, you can select the desired directory.
- Press "SEL" again, then the directory is fixed and the first file name is displayed.
- With "VOL" / "VOL" knob, you can select the file you want.
- Press "SEL", then the song selected will start.

#### 3. Searching Character:

- Press "A/PS" 3 times, then character search mode is activated.
- Press enter "SEL" button, then "A" character is displayed.
- With "VOL" / "VOL" knob, you can select the desired letter.
- Press enter "SEL" key longer than 2 sec.
- The song with the same character you selected is displayed.
- With "VOL" / "VOL" knob, you can select the desired song.
- Press enter "SEL" key, then the song selected will start.

### Connecting it to Portable MP3 Player



**MULTI-MEDIA CARD (MMC) / SD CARD SLOT**  
Support MP3 ID3 format music only.

**USB Port**  
Using USB cable to connect Your Portable MP3 Player.

#### \* IMPORTANT INFORMATION:

 
*This car radio has been designed following the latest USB technology.*

*The variety of memory stick available in the market, however, doesn't allow to make a product surely and fully compatible with all USB products of today and tomorrow.*

*Proper data transfer between the car radio and the removable memory is guaranteed only with the USB memory driver stick.*

## OPERATION

### REMOTE CONTROL

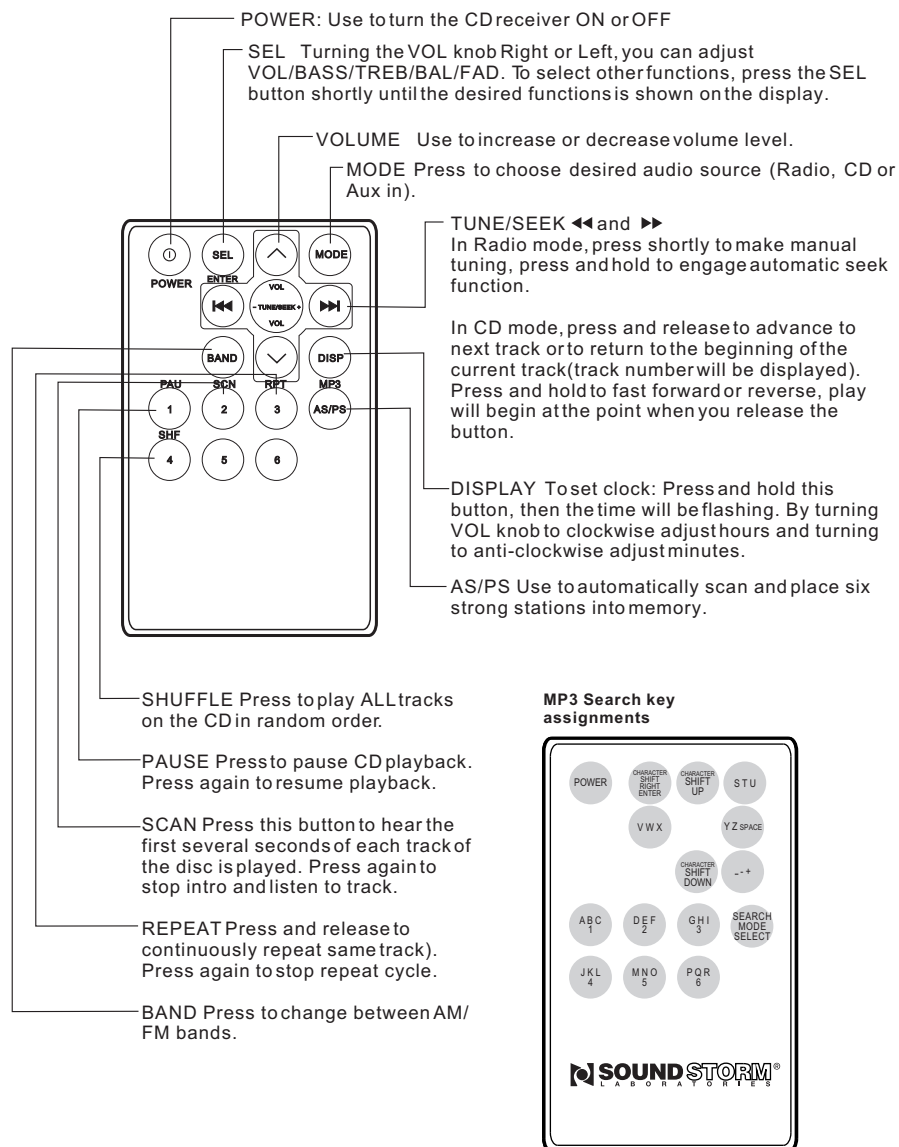

## SPECIFICATIONS

### CD/MP3 PLAYER SECTION

Signal to Noise Ratio	> 60dB
Channel Separation	> 50 dB (1kHz)
Frequency Response	20Hz- 20 kHz

### TUNER (FM)

Frequency range	87.5-107.9 MHz
Intermediate frequency	10.7 MHz
Sensitivity	2.8 $\mu$ V
Stereo separation	35 dB
Signal to noiseradio	55 dB
Channel step	100 kHz

### TUNER (AM)

Frequency range	530-1710 KHz
Intermediate frequency	10.71 MHz
Usable Sensitivity	32 dB $\mu$ V

### LINE-OUT

Output	350mV max.
Impedance	10kOhm

### GENERAL

Power Supply	13.8V DC (10.8-15.6V allowable)
Speaker impedance	4 or 8 ohm
Output power	40W x 4CH

**Note:** Specifications and the design are subject to possible modification without notice due to improvement.