 


TEL: 805.983.8008
3451 LUNAR COURT
OXNARD, CA 93030
WWW.SOUNDSTORMLAB.COM

 **SOUND STORM**[®]
LABORATORIES

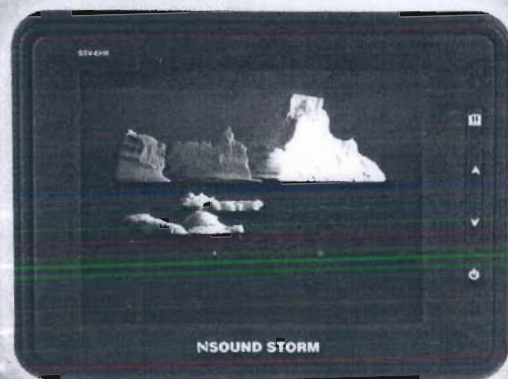

 **SOUND STORM**[®]
LABORATORIES

User's Manual

SSV-6HR

Automobile Headrest TFT LCD Monitor




SSV-6HR Owner's Manual

Congratulations on your purchase of a Sound Storm TFT high resolution LCD monitor. Before installing the monitor please carefully read these instructions and keep them for future reference.

CAUTION

1. the driver must not be able to view operational monitor while driving the vehicle. This is illegal in most states. CHECK with your local law enforcement officials for details.
2. Always check polarity when connecting wire to avoid damage to the unit and/or vehicle.
3. Do not open the housing of the monitor. Servicing must be done at our factory by authorized technicians to maintain the warranty.

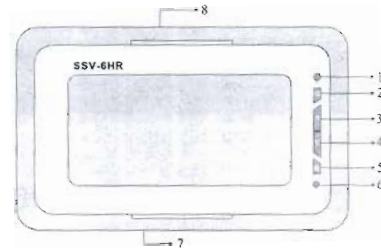


1. Remote Sensor
2. Menu
3. Increase
4. Decrease
5. Power
6. Power Indicator
7. 8. Headrest Housing



1. Source Connector
2. Video Input 1 (Yellow)
3. Video Input 2 (Blue)
4. Audio Input (White)
5. Negative Power (Black)
6. Positive Power (Red)
7. Fuse (2A)

SPECIFICATIONS

Model: SSV-6HR
 Color: TFT
 Resolution: 1024 x 234 Pixels
 Size: 6"
 System: NTSC
 Video: 2 Videos Input
 Audio: 1 Audio Input
 Speaker: 0.5W, 8Ω
 Power: DC 12V
 Current Consumption: 1A
 Weight: 520g
 Dimension: 180 x 140 x 40(mm)
 Operation Temperature: 0°C-60°C

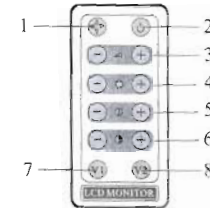

1. Angel Change
2. Power
3. Volume adjustment
4. Brightness adjustment
5. Color adjustment
6. Contrast adjustment
7. Video Input 1
8. Video Input 2